

WILDEN®

Part of Pump Solutions Group

A **DOVER** COMPANY

EOM

Engineering
Operation &
Maintenance

PX1500
Advanced™ Series
Metal Pump



Where Innovation Flows

www.wildenpump.com

PROFLO[™]
PROGRESSIVE PUMP TECHNOLOGY






















WIL-11230-E-11
Replaces WIL-11230-E-10

TABLE OF CONTENTS

SECTION 1	CAUTIONS—READ FIRST!	1
SECTION 2	WILDEN PUMP DESIGNATION SYSTEM	2
SECTION 3	HOW IT WORKS—PUMP & AIR DISTRIBUTION SYSTEM	3
SECTION 4	DIMENSIONAL DRAWINGS	4
SECTION 5	PERFORMANCE	
	PX1500 Performance	
	Operating Principle	8
	How to Use this EMS Curve	9
	PX1500 Aluminum Performance Curves	
	Rubber-Fitted	12
	TPE-Fitted	13
	PTFE-Fitted	14
	Full Stroke PTFE-Fitted	15
	Ultra-Flex™ -Fitted	16
	PX1500 Stainless Steel Performance Curves	
	Rubber-Fitted	17
	TPE-Fitted	18
	PTFE-Fitted	19
	Full Stroke PTFE-Fitted	20
	Ultra-Flex™ -Fitted	21
	PX1500 Stainless Steel Drop-In Performance Curves	
	Rubber-Fitted	22
	TPE-Fitted	23
	PTFE-Fitted	24
	Full Stroke PTFE-Fitted	25
	Ultra-Flex™ -Fitted	26
	Suction Lift Curves	
	PX1500 Aluminum	27
	PX1500 Stainless Steel & Alloy C	27
	PX1500 Stainless Steel Drop-In	28
SECTION 6	SUGGESTED INSTALLATION, OPERATION & TROUBLESHOOTING	30
SECTION 7	ASSEMBLY / DISASSEMBLY	33
SECTION 8	EXPLODED VIEW & PARTS LISTING	
	PX1500 Aluminum	40
	PX1500 Stainless Steel	44
	PX1500 Stainless Steel Drop-In	48
SECTION 9	ELASTOMER OPTIONS	51

CAUTIONS—READ FIRST!

-  **CAUTION:** Do not apply compressed air to the exhaust port — pump will not function.
-  **CAUTION:** Do not over-lubricate air supply — excess lubrication will reduce pump performance. Pump is pre-lubed.
-  **TEMPERATURE LIMITS:**
- | | | |
|--|--------------------|----------------|
| Neoprene | –17.7°C to 93.3°C | 0°F to 200°F |
| Buna-N | –12.2°C to 82.2°C | 10°F to 180°F |
| EPDM | –51.1°C to 137.8°C | –60°F to 280°F |
| Viton [®] | –40°C to 176.7°C | –40°F to 350°F |
| Wil-Flex [™] | –40°C to 107.2°C | –40°F to 225°F |
| Saniflex [™] | –28.9°C to 104.4°C | –20°F to 220°F |
| Polyurethane | –12.2°C to 65.6°C | 10°F to 150°F |
| Tetra-Flex [™] PTFE w/Neoprene Backed | 4.4°C to 107.2°C | 40°F to 225°F |
| Tetra-Flex [™] PTFE w/EPDM Backed | –10°C to 137°C | 14°F to 280°F |
| PTFE | 4.4°C to 104.4°C | 40°F to 220°F |
-  **CAUTION:** When choosing pump materials, be sure to check the temperature limits for all wetted components. Example: Viton[®] has a maximum limit of 176.7°C (350°F) but polypropylene has a maximum limit of only 79°C (175°F).
-  **CAUTION:** Maximum temperature limits are based upon mechanical stress only. Certain chemicals will significantly reduce maximum safe operating temperatures. Consult Chemical Resistance Guide (E4) for chemical compatibility and temperature limits.
-  **WARNING:** Prevention of static sparking — If static sparking occurs, fire or explosion could result. Pump, valves, and containers must be grounded to a proper grounding point when handling flammable fluids and whenever discharge of static electricity is a hazard.
-  **CAUTION:** Do not exceed 8.6 bar (125 psig) air supply pressure.
-  **CAUTION:** The process fluid and cleaning fluids must be chemically compatible with all wetted pump components (see E4).
-  **CAUTION:** Do not exceed 82°C (180°F) air inlet temperature for Pro-Flo X[™] models.
-  **CAUTION:** Pumps should be thoroughly flushed before installing into process lines. FDA and USDA approved pumps should be cleaned and/or sanitized before being used.
-  **CAUTION:** Always wear safety glasses when operating pump. If diaphragm rupture occurs, material being pumped may be forced out air exhaust.
-  **CAUTION:** Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from pump. Disconnect all intake, discharge and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container.
-  **CAUTION:** Blow out air line for 10 to 20 seconds before attaching to pump to make sure all pipeline debris is clear. Use an in-line air filter. A 5μ (micron) air filter is recommended.
-  **NOTE:** When installing PTFE diaphragms, it is important to tighten outer pistons simultaneously (turning in opposite directions) to ensure tight fit. (See torque specifications in Section 7.)
-  **NOTE:** Cast Iron PTFE-fitted pumps come standard from the factory with expanded PTFE gaskets installed in the diaphragm bead of the liquid chamber. PTFE gaskets cannot be re-used. Consult PS-TG for installation instructions during reassembly.
-  **NOTE:** Before starting disassembly, mark a line from each liquid chamber to its corresponding air chamber. This line will assist in proper alignment during reassembly.
-  **CAUTION:** Pro-Flo[®] pumps cannot be used in submersible applications. Pro-Flo X[™] is available in both submersible and non-submersible options. Do not use non-submersible Pro-Flo X[™] models in submersible applications. Turbo-Flo[®] pumps can be used in submersible applications.
-  **CAUTION:** Tighten all hardware prior to installation.

WILDEN PUMP DESIGNATION SYSTEM

PX1500 METAL

76 mm (3") Pump
Maximum Flow Rate:
1030 lpm (272 gpm)

LEGEND

PX1500 / XXXXX / XXX / XX / XXX / XXXX

MODEL

O-RINGS
 VALVE SEAT
 VALVE BALLS
 DIAPHRAGMS
 AIR VALVE
 CENTER BLOCK
 AIR CHAMBERS
 WETTED PARTS & OUTER PISTON

**SPECIALTY
CODE**
 (if applicable)

MATERIAL CODES

MODEL

PX1500 = 76 mm (3")
 XPX1500 = 76 mm (3") ATEX

WETTED PARTS/OUTER PISTON¹

AA = ALUMINUM / ALUMINUM
 HH = ALLOY C / ALLOY C
 SS = STAINLESS STEEL /
 STAINLESS STEEL

AIR CHAMBERS

A = ALUMINUM
 S = STAINLESS STEEL
 C = PFA COATED

CENTER BLOCK

A = ALUMINUM
 S = STAINLESS STEEL
 P = POLYPROPYLENE

AIR VALVE

A = ALUMINUM
 S = STAINLESS STEEL
 P = POLYPROPYLENE

DIAPHRAGMS

BNS = BUNA-N (Red Dot)
 XBS = CONDUCTIVE BUNA-N
 (Two Red Dots)²
 EPS = EPDM (Blue Dot)²
 PUS = POLYURETHANE (Clear)
 NES = NEOPRENE (Green Dot)
 TEU = PTFE w/EPDM
 BACK-UP (White)²
 TNU = PTFE w/NEOPRENE
 BACK-UP (White)
 FSS = SANIFLEX™ [Hytrel®
 (Cream)]
 FWS = SANITARY WIL-FLEX™
 VTS = VITON® (White Dot)
 WFS = WIL-FLEX™ [Santoprene®
 (Orange Dot)]
 TSU = PTFE W/SANIFLEX™
 BACK-UP (White)
 BNU = BUNA-N, ULTRA-FLEX™
 EPU = EPDM, ULTRA-FLEX™²
 NEU = NEOPRENE, ULTRA-FLEX™
 VTU = VITON®, ULTRA-FLEX™
 TSS = FULL STROKE PTFE
 W/SANIFLEX™ BACK-UP
 TWS = FULL STROKE PTFE
 W/WIL-FLEX™ BACK-UP

BALL VALVES

BN = BUNA-N (Red Dot)
 FS = SANIFLEX™
 [Hytrel® (Cream)]
 EP = EPDM (Blue Dot)²
 NE = NEOPRENE (Green Dot)
 PU = POLYURETHANE (Brown)
 TF = PTFE (White)²
 VT = VITON® (Silver or White Dot)
 WF = WIL-FLEX™ [Santoprene®
 (Orange Dot)]

VALVE SEAT

BN = BUNA-N (Red Dot)
 EP = EPDM (Blue Dot)²
 FS = SANIFLEX™ [Hytrel®
 (Cream)]
 NE = NEOPRENE (Green Dot)
 PU = POLYURETHANE (Brown)
 VT = VITON® (Silver or
 White Dot)
 WF = WIL-FLEX™ [Santoprene®
 (Orange Dot)]
 M = MILD STEEL
 S = STAINLESS STEEL
 H = ALLOY C

VALVE SEAT O-RING

TF = PTFE (White)²

NOTE:

¹Reduced stroke PTFE-fitted pumps require stainless outer pistons.

Full Stroke PTFE-fitted pumps can have either stainless or aluminum outer pistons.

²Meets the requirements of ATEX.

SPECIALTY CODES

0044 Stallion balls & seats ONLY
 0100 Wil-Gard II™ 110V
 0102 Wil-Gard II™ sensor wires ONLY
 0103 Wil-Gard II™ 220V
 0320 Submersible center block
 0323 Submersible center block, DIN flange
 0540 ANSI flange
 0544 DIN flange

Drop-In:

0677 Center Ported, NPT Inlet & Discharge
 0678 Center Ported, BSPT Inlet & Discharge
 0685 Center Ported, NPT Inlet & Discharge, PCM Sensor & Wires
 0687 Center Ported, NPT Inlet & Discharge, Single-point Exhaust
 0688 Center Ported, BSPT Inlet and Discharge manifolds, Single-point Exhaust
 0689 Center Ported, NPT inlet and discharge with external SS fasteners
 0693 Center Ported, NPT, PFA Coated

NOTE: MOST ELASTOMERIC MATERIALS USE COLORED DOTS FOR IDENTIFICATION.

NOTE: Not all models are available with all material options.

Viton® is a registered trademark of DuPont Dow Elastomers.



HOW IT WORKS—PUMP

The Wilden diaphragm pump is an air-operated, positive displacement, self-priming pump. These drawings show flow pattern through the pump upon its initial stroke. It is assumed the pump has no fluid in it prior to its initial stroke.

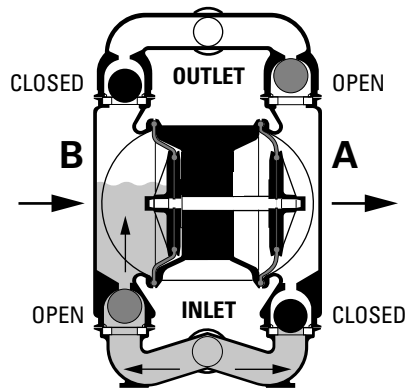


FIGURE 1 The air valve directs pressurized air to the back side of diaphragm A. The compressed air is applied directly to the liquid column separated by elastomeric diaphragms. The diaphragm acts as a separation membrane between the compressed air and liquid, balancing the load and removing mechanical stress from the diaphragm. The compressed air moves the diaphragm away from the center of the pump. The opposite diaphragm is pulled in by the shaft connected to the pressurized diaphragm. Diaphragm B is on its suction stroke; air behind the diaphragm has been forced out to atmosphere through the exhaust port of the pump. The movement of diaphragm B toward the center of the pump creates a vacuum within chamber B. Atmospheric pressure forces fluid into the inlet manifold forcing the inlet valve ball off its seat. Liquid is free to move past the inlet valve ball and fill the liquid chamber (see shaded area).

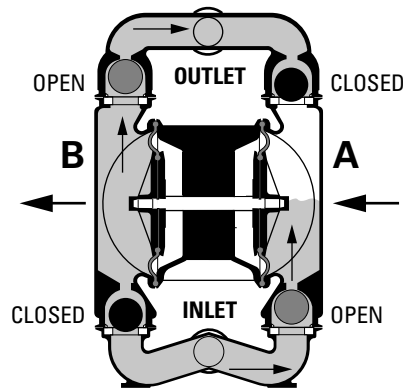


FIGURE 2 When the pressurized diaphragm, diaphragm A, reaches the limit of its discharge stroke, the air valve redirects pressurized air to the back side of diaphragm B. The pressurized air forces diaphragm B away from the center while pulling diaphragm A to the center. Diaphragm B is now on its discharge stroke. Diaphragm B forces the inlet valve ball onto its seat due to the hydraulic forces developed in the liquid chamber and manifold of the pump. These same hydraulic forces lift the discharge valve ball off its seat, forcing fluid to flow through the pump discharge. The movement of diaphragm A toward the center of the pump creates a vacuum within liquid chamber A. Atmospheric pressure forces fluid into the inlet manifold of the pump. The inlet valve ball is forced off its seat allowing the fluid being pumped to fill the liquid chamber.


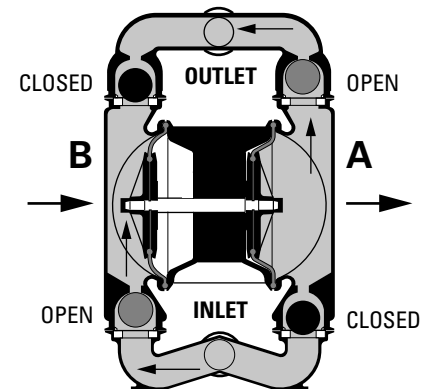



FIGURE 3 At completion of the stroke, the air valve again redirects air to the back side of diaphragm A, which starts diaphragm B on its exhaust stroke. As the pump reaches its original starting point, each diaphragm has gone through one exhaust and one discharge stroke. This constitutes one complete pumping cycle. The pump may take several cycles to completely prime depending on the conditions of the application.




HOW IT WORKS—AIR DISTRIBUTION SYSTEM

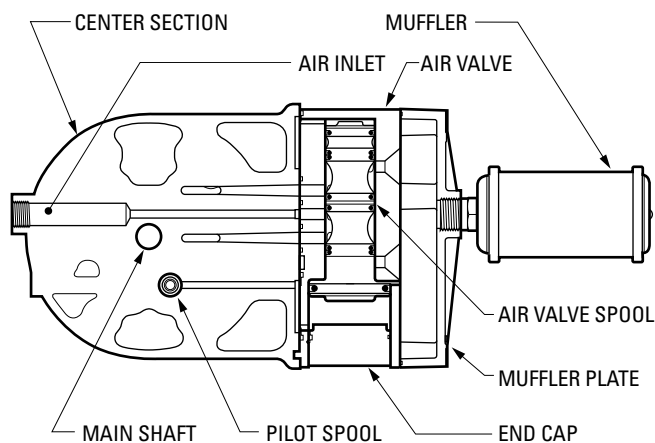

The Pro-Flo[®] patented air distribution system incorporates two moving parts: the air valve spool and the pilot spool. The heart of the system is the air valve spool and air valve. This valve design incorporates an unbalanced spool. The smaller end of the spool is pressurized continuously, while the large end is alternately pressurized then exhausted to move the spool. The spool directs pressurized air to one air chamber while exhausting the other. The air causes the main shaft/diaphragm assembly to shift to one side — discharging liquid on that side and pulling liquid in on the other side. When the shaft reaches the end of its stroke, the inner piston actuates the pilot spool, which pressurizes and exhausts the large end of the air valve spool. The repositioning of the air valve spool routes the air to the other air chamber.

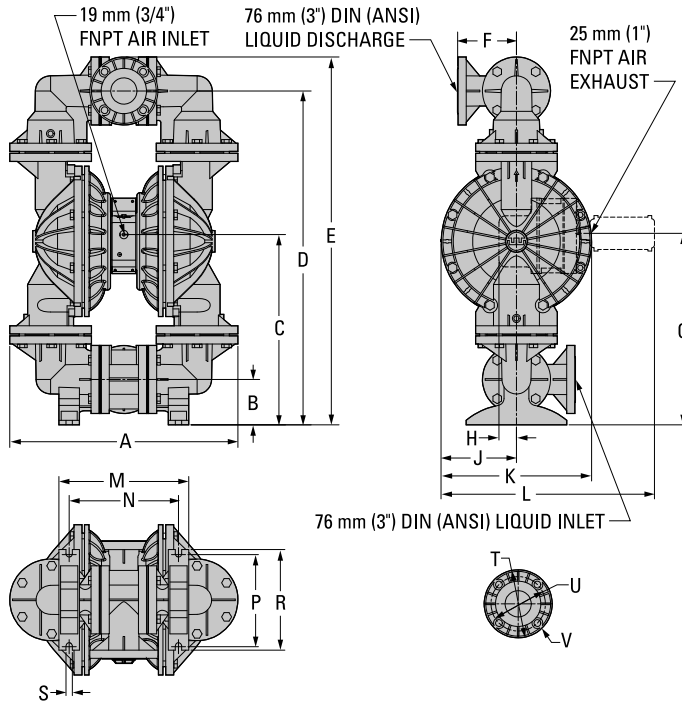
PX1500 Aluminum

DIMENSIONS

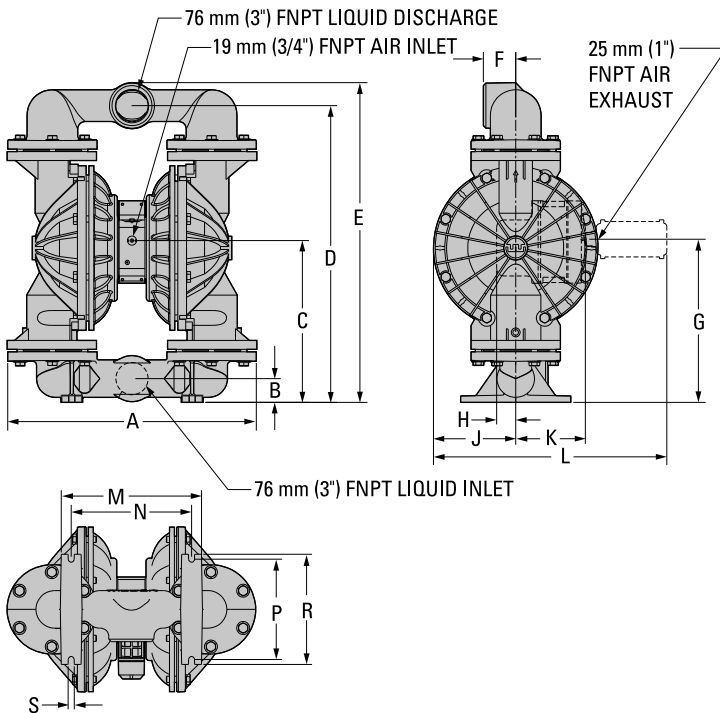ITEM	METRIC (mm)	STANDARD (inch)
A	615	24.2
B	127	5.0
C	533	21.0
D	934	36.8
E	1031	40.6
F	165	6.5
G	536	21.1
H	48	1.9
J	211	8.3
K	422	16.6
L	597	23.5
M	363	14.3
N	307	12.1
P	259	10.2
R	282	11.1
S	18	0.7
	DIN (mm)	ANSI (inch)
T	200 DIA.	7.5 DIA.
U	160 DIA.	6.0 DIA.
V	18 DIA.	0.8 DIA.

PX1500 Aluminum Drop-In Type

DIMENSIONS

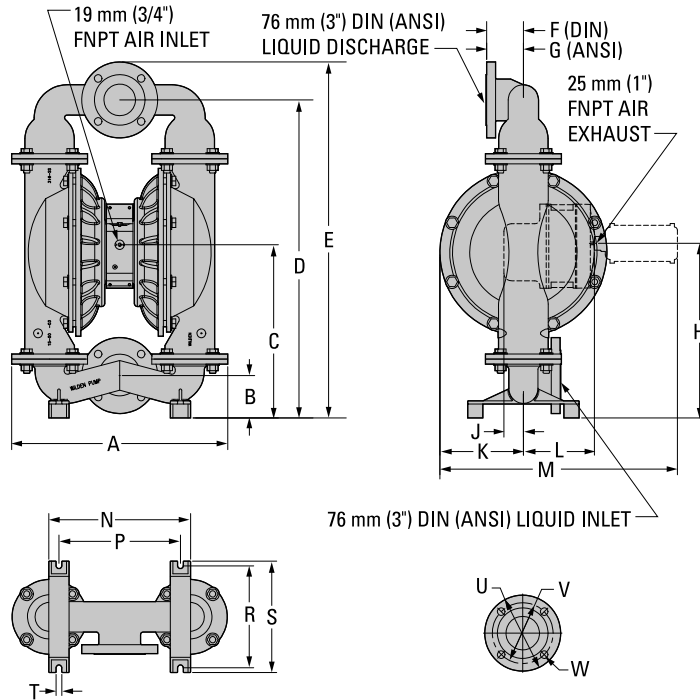ITEM	METRIC (mm)	STANDARD (inch)
A	635	25.0
B	61	2.4
C	414	16.3
D	760	29.9
E	818	32.2
F	84	3.3
G	417	16.4
H	48	1.9
J	211	8.3
K	178	7.0
L	597	23.5
M	358	14.1
N	307	12.1
P	257	10.1
R	282	11.1
S	15	0.6


PX1500 Stainless Steel/Alloy C



DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
A	541	21.3
B	107	4.2
C	434	17.1
D	798	31.4
E	894	35.2
F	89	3.5
G	91	3.6
H	437	17.2
J	48	1.9
K	211	8.3
L	178	7.0
M	597	23.5
N	356	14.0
P	305	12.0
R	257	10.1
S	279	11.0
T	15	0.6
	DIN (mm)	ANSI (inch)
U	200 DIA.	7.5 DIA.
V	160 DIA.	6.0 DIA.
W	18 DIA.	0.8 DIA.

PX1500 Stainless Steel Drop-In Type

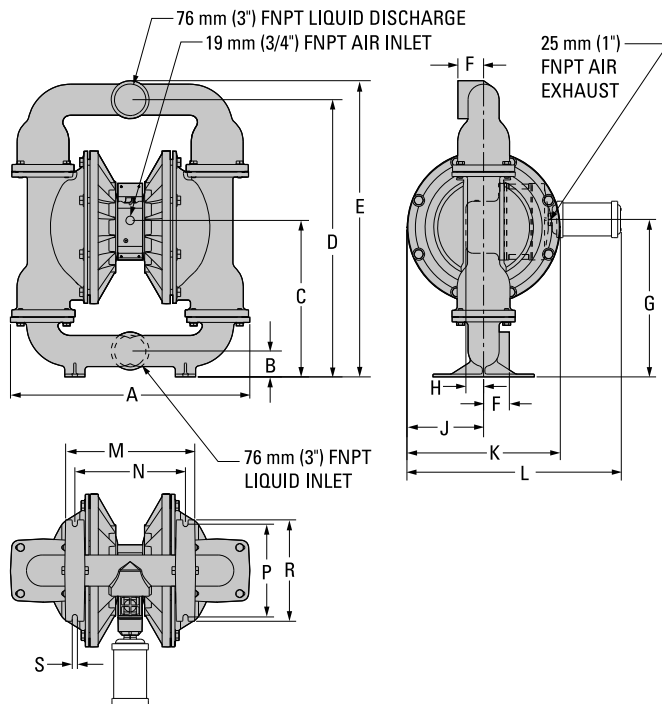


DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
A	650	25.6
B	71	2.8
C	432	17
D	765	30.1
E	815	32.1
F	71	2.8
G	434	17.1
H	48	1.9
J	211	8.3
K	422	16.6
L	589	23.2
M	356	14
N	305	12
P	257	10.1
R	279	11
S	15	0.6

REV A

PX1500 Stainless Steel Drop-In Flanged

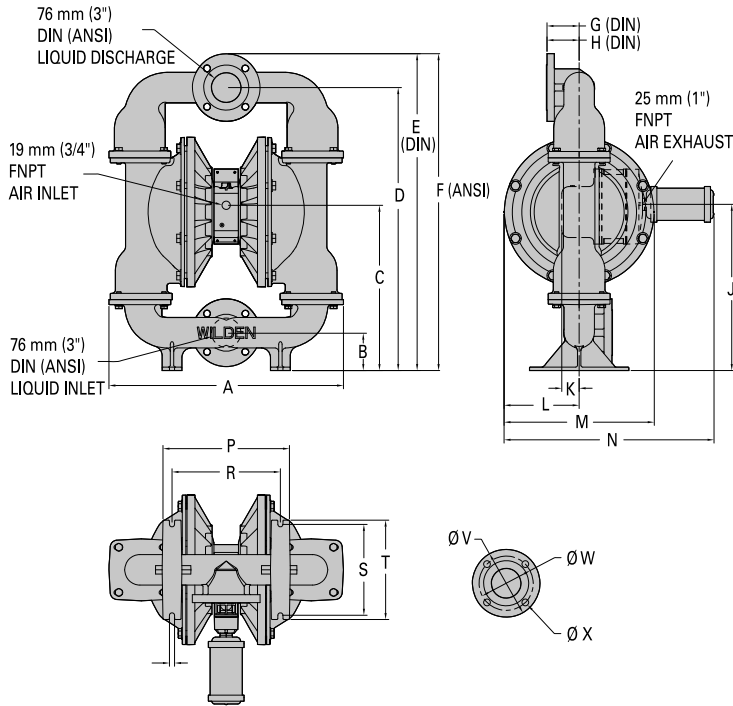

DIMENSIONS

ITEM	METRIC (mm)	STANDARD (inch)
A	659	26.0
B	105	4.1
C	465	18.3
D	796	31.3
E	896	35.3
F	890	35.1
G	88	3.5
H	90	3.6
J	467	18.4
K	49	1.9
L	211	8.3
M	422	16.6
N	591	23.3
P	356	14.0
R	305	12.0
S	256	10.1
T	279	11.0
U	14	.6
	DIN (mm)	ANSI (inch)
V	200 DIA.	7.5 DIA.
W	160 DIA.	6.0 DIA.
X	18 DIA.	0.8 DIA.

REV A

PX1500

M E T A L

WILDEN
A DOVER COMPANY



PROFLO™
PROGRESSIVE PUMP TECHNOLOGY

PX1500 PERFORMANCE

Pro-Flo X[™] Operating Principle

The Pro-Flo X[™] air distribution system with the revolutionary Efficiency Management System (EMS) offers flexibility never before seen in the world of AODD pumps. The patent-pending EMS is simple and easy to use. With the turn of an integrated

control dial, the operator can select the optimal balance of flow and efficiency that best meets the application needs. Pro-Flo X[™] provides higher

performance, lower operational costs and flexibility that exceeds previous industry standards.



<p>Turning the dial changes the relationship between air inlet and exhaust porting.</p>	<p>Each dial setting represents an entirely different flow curve</p>	<p>Pro-Flo X[™] pumps are shipped from the factory on setting 4, which is the highest flow rate setting possible</p>	<p>Moving the dial from setting 4 causes a decrease in flow and an even greater decrease in air consumption.</p>	<p>When the air consumption decreases more than the flow rate, efficiency is improved and operating costs are reduced.</p>

HOW TO USE THIS EMS CURVE

Example 1

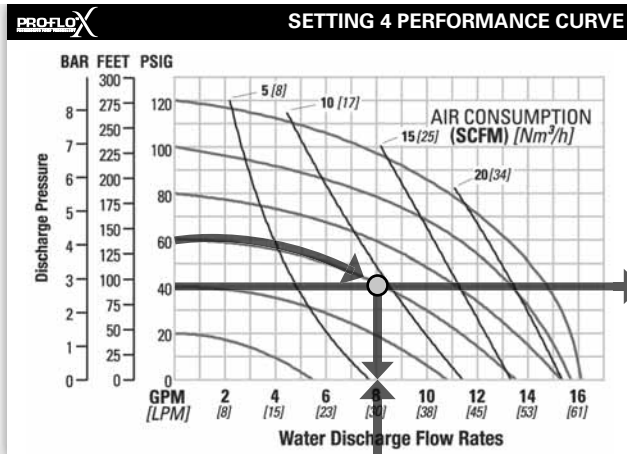


Figure 1

Example data point = **8.2** GPM

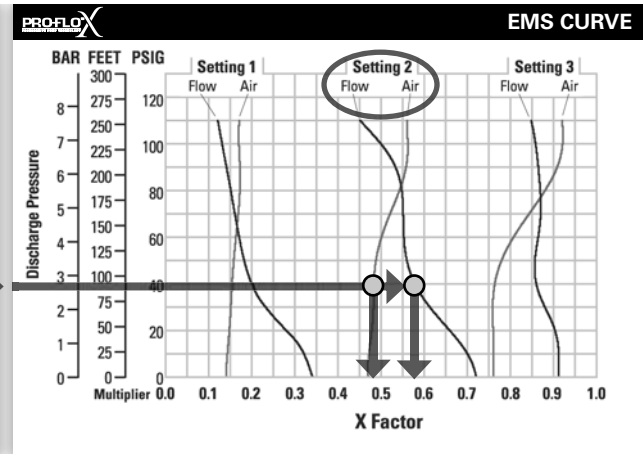


Figure 2

Example data point = **0.58** flow multiplier
0.48 air multiplier

This is an example showing how to determine flow rate and air consumption for your Pro-Flo X[™] pump using the Efficiency Management System (EMS) curve and the performance curve. For this example we will be using 4.1 bar (60 psig) inlet air pressure and 2.8 bar (40 psig) discharge pressure and EMS setting 2.

Step 1: Identifying performance at setting 4. Locate the curve that represents the flow rate of the pump with 4.1 bar (60 psig) air inlet pressure. Mark the point where this curve crosses the horizontal line representing 2.8 bar (40 psig) discharge pressure. (Figure 1). After locating your performance point on the flow curve, draw a vertical line downward until reaching the bottom scale on the chart. Identify the flow rate (in this case, 8.2 gpm). Observe location of performance point relative to air consumption curves and approximate air consumption value (in this case, 9.8 scfm).

Step 2: Determining flow and air X Factors. Locate your discharge pressure (40 psig) on the vertical axis of the EMS curve (Figure 2). Follow along the 2.8 bar (40 psig) horizontal line until intersecting both flow and air curves for your desired EMS setting (in this case, setting 2). Mark the points where the EMS curves intersect the horizontal discharge pressure line. After locating your EMS points on the EMS

curve, draw vertical lines downward until reaching the bottom scale on the chart. This identifies the flow X Factor (in this case, 0.58) and air X Factor (in this case, 0.48).

Step 3: Calculating performance for specific EMS setting. Multiply the flow rate (8.2 gpm) obtained in Step 1 by the flow X Factor multiplier (0.58) in Step 2 to determine the flow rate at EMS setting 2. Multiply the air consumption (9.8 scfm) obtained in Step 1 by the air X Factor multiplier (0.48) in Step 2 to determine the air consumption at EMS setting 2 (Figure 3).

8.2 gpm	(flow rate for Setting 4)
.58	(Flow X Factor setting 2)
<hr/>	
4.8 gpm	(Flow rate for setting 2)
9.8 scfm	(air consumption for setting 4)
.48	(Air X Factor setting 2)
<hr/>	
4.7 scfm	(air consumption for setting 2)

Figure 3

The flow rate and air consumption at Setting 2 are found to be 18.2 lpm (4.8 gpm) and 7.9 Nm³/h (4.7 scfm) respectively.

Example 2.1

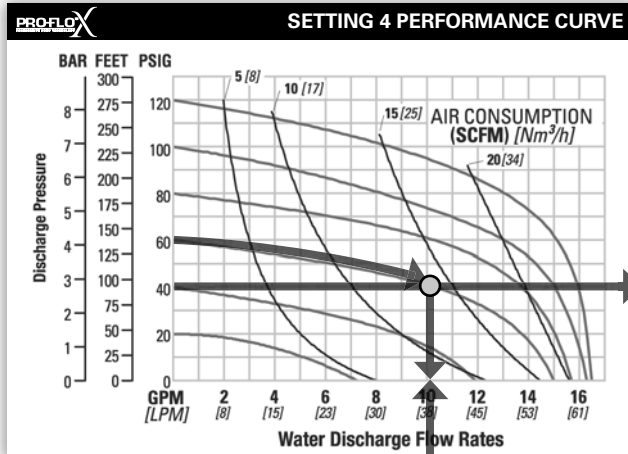


Figure 4

Example data point = **10.2 gpm**

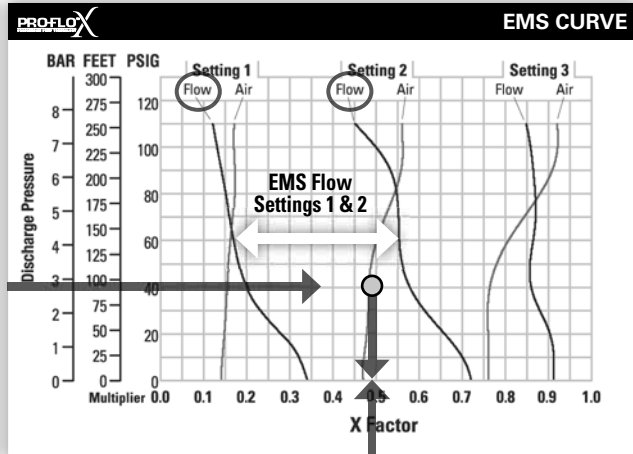


Figure 5

0.49 flow multiplier

This is an example showing how to determine the inlet air pressure and the EMS setting for your Pro-Flo X™ pump to optimize the pump for a specific application. For this example we will be using an application requirement of 18.9 lpm (5 gpm) flow rate against 2.8 bar (40 psig) discharge pressure. This example will illustrate how to calculate the air consumption that could be expected at this operational point.

DETERMINE EMS SETTING

Step 1: Establish inlet air pressure. Higher air pressures will typically allow the pump to run more efficiently, however, available plant air pressure can vary greatly. If an operating pressure of 6.9 bar (100 psig) is chosen when plant air frequently dips to 6.2 bar (90 psig) pump performance will vary. Choose an operating pressure that is within your compressed air system's capabilities. For this example we will choose 4.1 bar (60 psig).

Step 2: Determine performance point at setting 4. For this example an inlet air pressure of 4.1 bar (60 psig) inlet air pressure has been chosen. Locate the curve that represents the performance of the pump with 4.1 bar (60 psig) inlet air pressure. Mark the point where this curve crosses the horizontal line representing 2.8 bar (40 psig) discharge pressure. After locating this point on the flow curve, draw a vertical line downward until reaching the bottom scale on the chart and identify the flow rate.

In our example it is 38.6 lpm (10.2 gpm). This is the setting 4 flow rate. Observe the location of the performance point relative to air consumption curves and approximate air consumption value. In our example setting 4 air consumption is 24 Nm³/h (14 scfm). See figure 4.

Step 3: Determine flow X Factor. Divide the required flow rate 18.9 lpm (5 gpm) by the setting 4 flow rate 38.6 lpm (10.2 gpm) to determine the flow X Factor for the application.

$$5 \text{ gpm} / 10.2 \text{ gpm} = 0.49 \text{ (flow X Factor)}$$

Step 4: Determine EMS setting from the flow X Factor. Plot the point representing the flow X Factor (0.49) and the application discharge pressure 2.8 bar (40 psig) on the EMS curve. This is done by following the horizontal 2.8 bar (40 psig) psig discharge pressure line until it crosses the vertical 0.49 X Factor line. Typically, this point lies between two flow EMS setting curves (in this case, the point lies between the flow curves for EMS setting 1 and 2). Observe the location of the point relative to the two curves it lies between and approximate the EMS setting (figure 5). For more precise results you can mathematically interpolate between the two curves to determine the optimal EMS setting.

For this example the EMS setting is 1.8.

HOW TO USE THIS EMS CURVE

Example 2.2

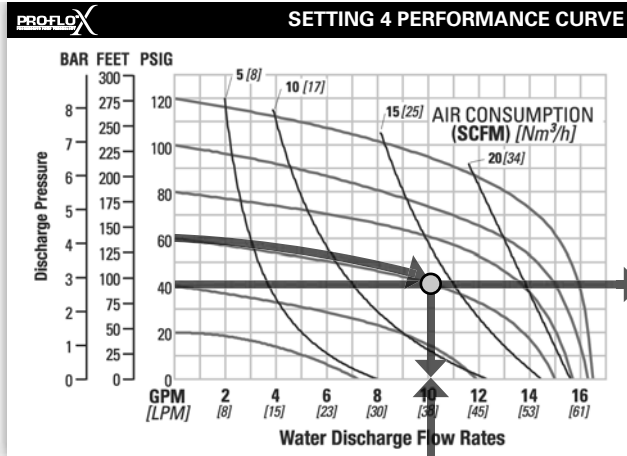


Figure 6

Example data point = **10.2** gpm

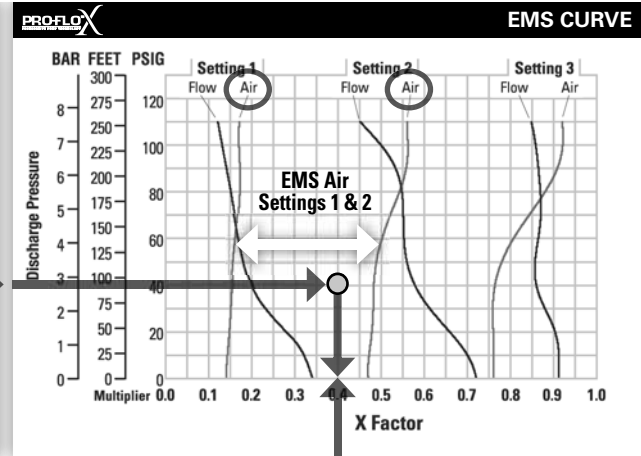


Figure 7

Example data point = **0.40** air multiplier

Determine air consumption at a specific EMS setting.

Step 1: Determine air X Factor. In order to determine the air X Factor, identify the two air EMS setting curves closest to the EMS setting established in example 2.1 (in this case, the point lies between the air curves for EMS setting 1 and 2). The point representing your EMS setting (1.8) must be approximated and plotted on the EMS curve along the horizontal line representing your discharge pressure (in this case, 40 psig). This air point is different than the flow point plotted in example 2.1. After estimating (or interpolating) this point on the curve, draw a vertical line downward until reaching the bottom scale on the chart and identify the air X Factor (figure 7).

For this example the air X Factor is **0.40**

Step 2: Determine air consumption. Multiply your setting 4 air consumption (14 scfm) value by the air X Factor obtained above (0.40) to determine your actual air consumption.

$$14 \text{ scfm} \times 0.40 = 5.6 \text{ SCFM}$$

In summary, for an application requiring 18.9 lpm (5 gpm) against 2.8 bar (40 psig) discharge pressure, the pump inlet air pressure should be set to 4.1 bar (60 psig) and the EMS dial should be set to 1.8. The pump would then consume 9.5 Nm³/h (5.6 scfm) of compressed air.


PX1500 ALUMINUM RUBBER-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

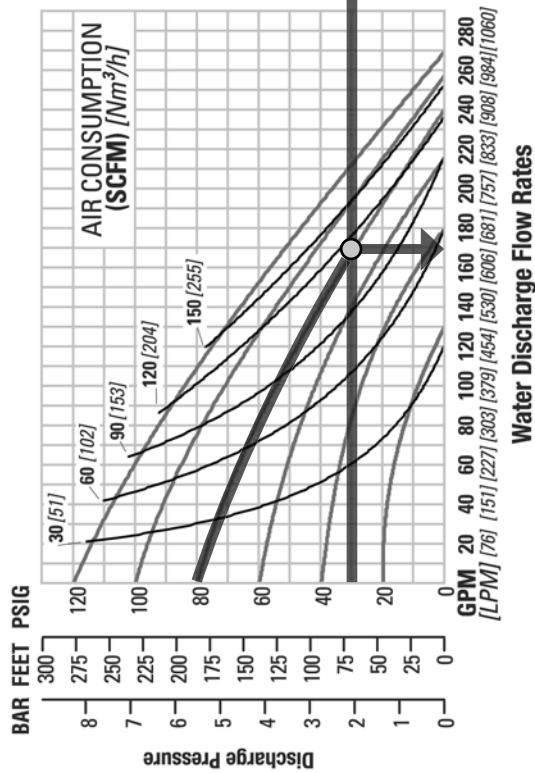

EMS CURVE

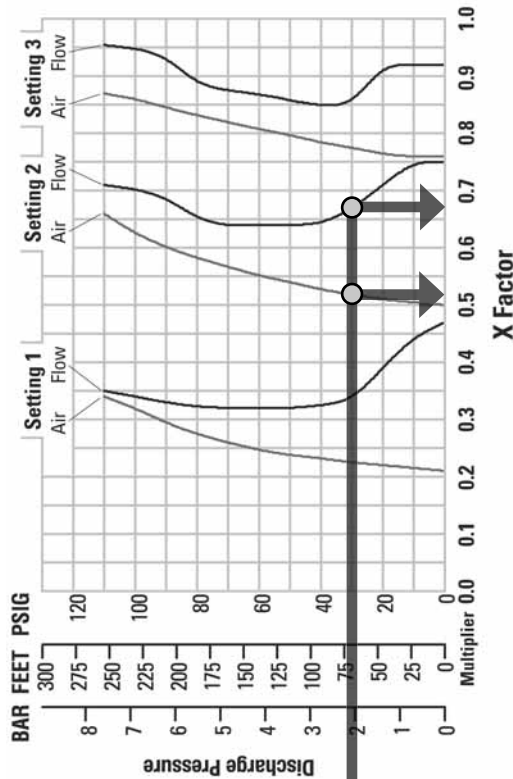

TECHNICAL DATA

Height1031 mm (40.6")
Width615 mm (24.2")
Depth422 mm (16.6")
Ship WeightAluminum 83 kg (182 lbs.)
Aluminum Drop-In 70 kg (152 lbs.)
Air Inlet19 mm (3/4")
Inlet76 mm (3")
Outlet76 mm (3")
Suction Lift6.1 m Dry (19.9')
8.8 m Wet (28.9')
Disp. Per Stroke5.22 l (1.38 gal.) ¹
Max. Flow Rate1021 lpm (270 gpm)
Max. Size Solids12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

EXAMPLE

A PX1500 aluminum, Rubber-fitted pump operating at EMS setting 4, achieved a flow rate of 640 lpm (169 gpm) using 192 Nm³/h (113 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 2.1 bar (30 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 2.1 bar (30 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.67 and the air "X factor" is 0.52 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 429 lpm (113 gpm) and an air consumption of 100 Nm³/h (59 scfm). The flow rate was reduced by 33% while the air consumption was reduced by 48%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.


Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.


The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

PX1500 ALUMINUM TPE-FITTED

SETTING 4 PERFORMANCE CURVE

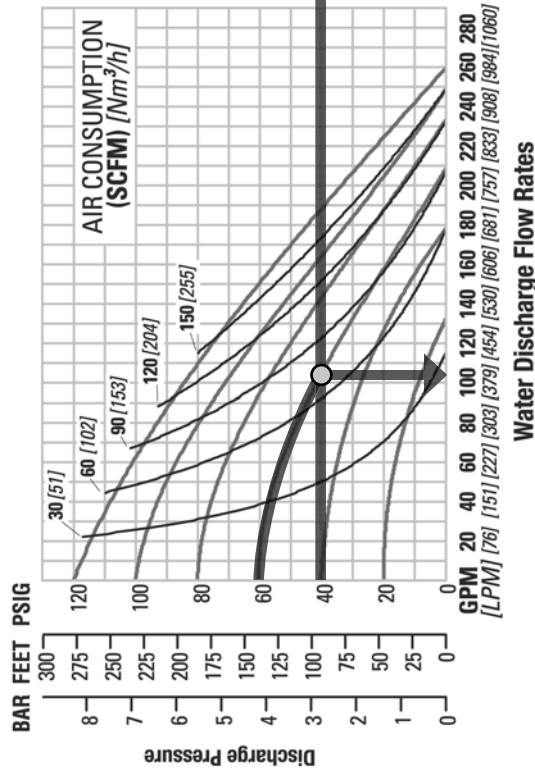

EMS CURVE

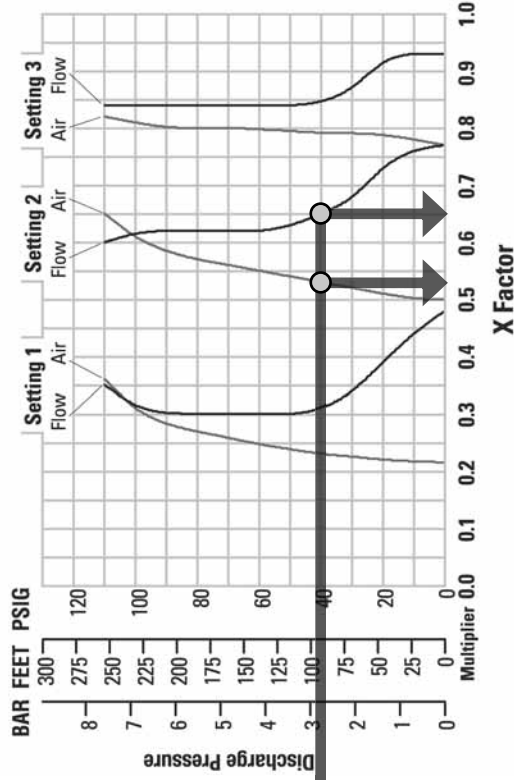

TECHNICAL DATA

Height 1031 mm (40.6")
Width 615 mm (24.2")
Depth 422 mm (16.6")
Ship Weight Aluminum 83 kg (182 lbs.)
	Aluminum Drop-In 70 kg (152 lbs.)
Air Inlet 19 mm (3/4")
Inlet 76 mm (3")
Outlet 76 mm (3")
Suction Lift 6.6 m Dry (21.7')
	8.8 m Wet (28.9')
Disp. Per Stroke 4.47 l (1.18 gal.) ¹
Max. Flow Rate 984 lpm (260 gpm)
Max. Size Solids 12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 aluminum, TPE-fitted pump operating at EMS setting 4, achieved a flow rate of 394 lpm (104 gpm) using 122 Nm³/h (72 scfm) of air when run at 4.1 bar (60 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.65 and the air "X factor" is 0.53 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 256 lpm (68 gpm) and an air consumption of 65 Nm³/h (38 scfm). The flow rate was reduced by 35% while the air consumption was reduced by 47%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 ALUMINUM PTFE-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

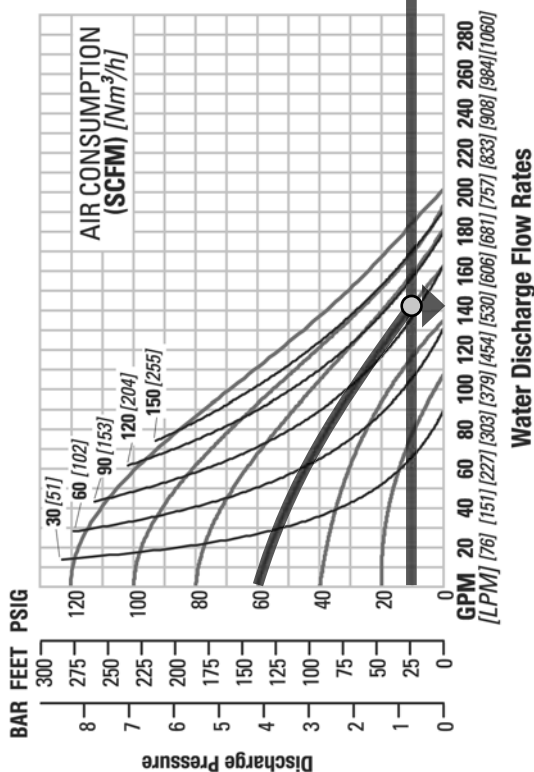

EMS CURVE

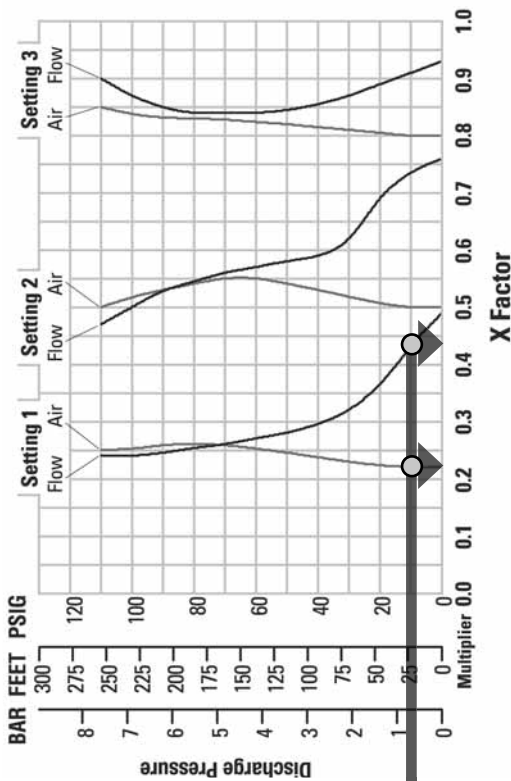

TECHNICAL DATA

Height	1031 mm (40.6")
Width	615 mm (24.2")
Depth	422 mm (16.6")
Ship Weight	Aluminum 83 kg (182 lbs.)
	Aluminum Drop-In 70 kg (152 lbs.)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	4.4 m Dry (14.4') 7.8 m Wet (25.6')
Disp. Per Stroke	3.48 l (0.92 gal.)
Max. Flow Rate	765 lpm (202 gpm)
Max. Size Solids	12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings

EXAMPLE

A PX1500 aluminum, PTFE-fitted pump operating at EMS setting 4, achieved a flow rate of 538 lpm (142 gpm) using 160 Nm³/h (94 scfm) of air when run at 4.1 bar (60 psig) air inlet pressure and 0.7 bar (10 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 0.7 bar (10 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.43 and the air "X factor" is 0.22 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 231 lpm (61 gpm) and an air consumption of 35 Nm³/h (21 scfm). The flow rate was reduced by 57% while the air consumption was reduced by 78%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 ALUMINUM FULL STROKE PTFE-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

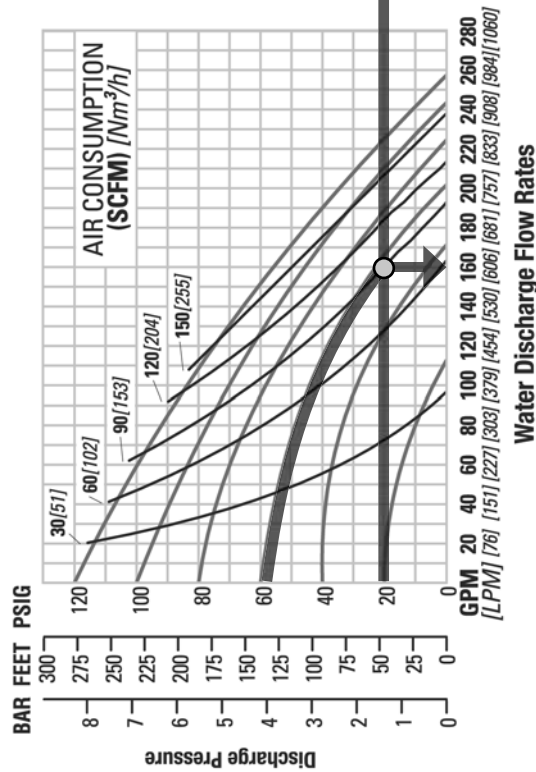

EMS CURVE

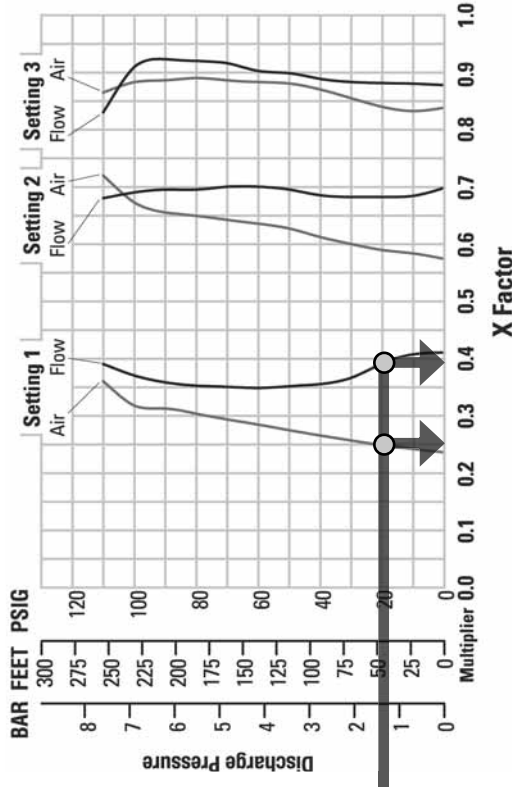

TECHNICAL DATA

Height	1031 mm (40.6")
Width	615 mm (24.2")
Depth	422 mm (16.6")
Ship Weight	Aluminum 83 kg (182 lbs.)
	Aluminum Drop-in 70 kg (152 lbs.)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	6.4 m Dry (21.0') 9.0 m Wet (29.5')
Disp. Per Stroke	5.3 l (1.39 gal.)
Max. Flow Rate	974 lpm (257.3 gpm)
Max. Size Solids	12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings

EXAMPLE

A PX1500 aluminum, Full Flow PTFE fitted pump operating at EMS setting 4, achieved a flow rate of 606 lpm (160 gpm) using 153 Nm³/h (90 scfm) of air when run at 4.0 bar (58 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.39 and the air "X factor" is 0.25 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 236 lpm (62 gpm) and an air consumption of 38 Nm³/h (23 scfm). The flow rate was reduced by 61% while the air consumption was reduced by 75%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 ALUMINUM ULTRA-FLEX™ FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

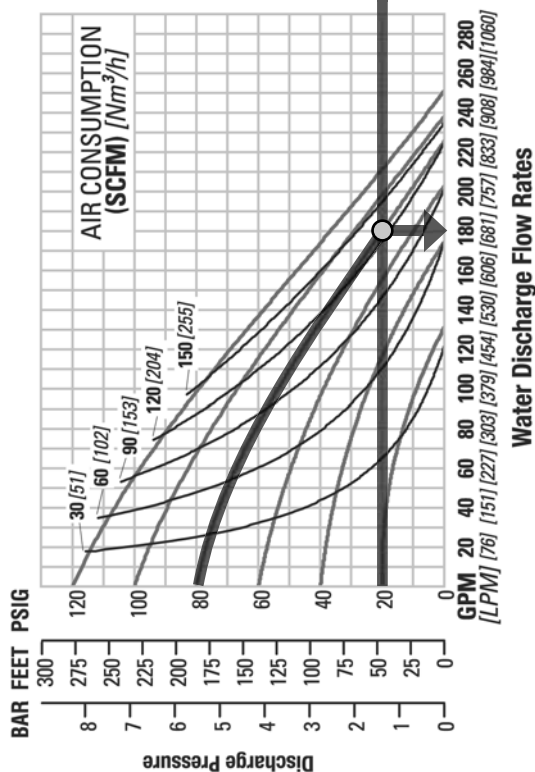

EMS CURVE

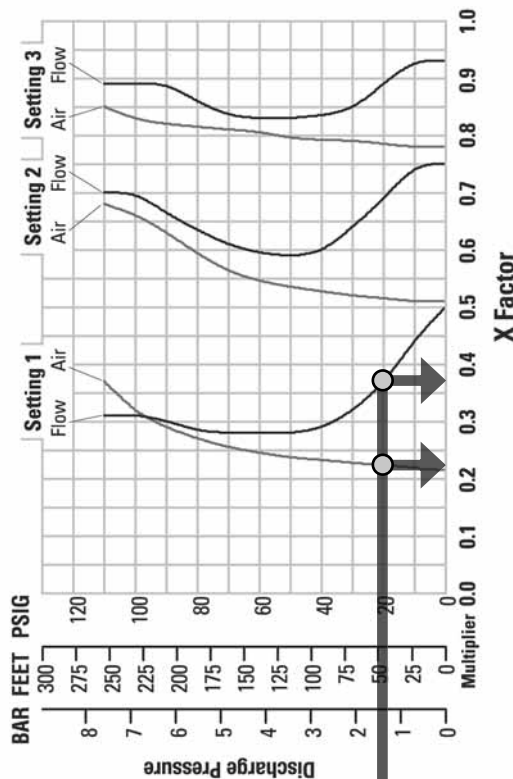

TECHNICAL DATA

Height	1031 mm (40.6")
Width	615 mm (24.2")
Depth	422 mm (16.6")
Ship Weight	Aluminum 83 kg (182 lbs.)
	Aluminum Drop-In 70 kg (152 lbs.)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	6.9 m Dry (22.7')
	8.8 m Wet (28.9')
Disp. Per Stroke	4.35 l (1.15 gal.)
Max. Flow Rate	950 lpm (251 gpm)
Max. Size Solids	12.7 mm (1/2")

*Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 aluminum, Ultra-Flex-fitted pump operating at EMS setting 4, achieved a flow rate of 681 lpm (180 gpm) using 207 Nm³/h (122 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.37 and the air "X factor" is 0.22 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 252 lpm (67 gpm) and an air consumption of 46 Nm³/h (27 scfm). The flow rate was reduced by 63% while the air consumption was reduced by 78%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 STAINLESS STEEL RUBBER-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

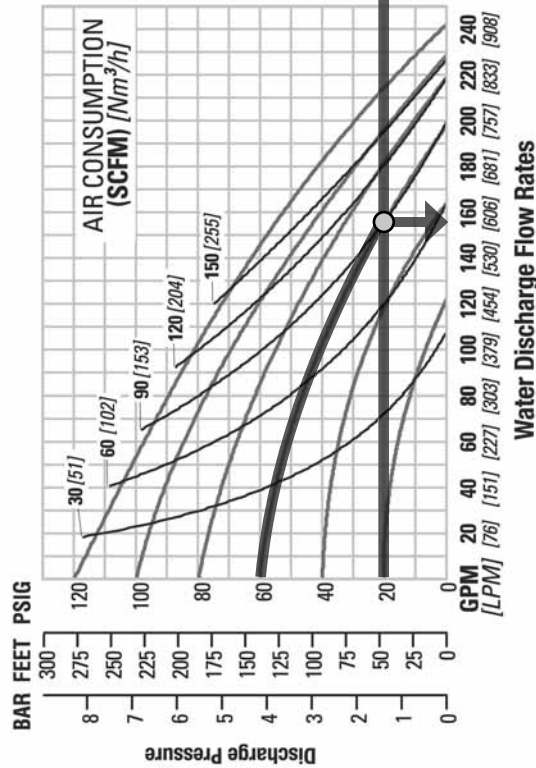

EMS CURVE

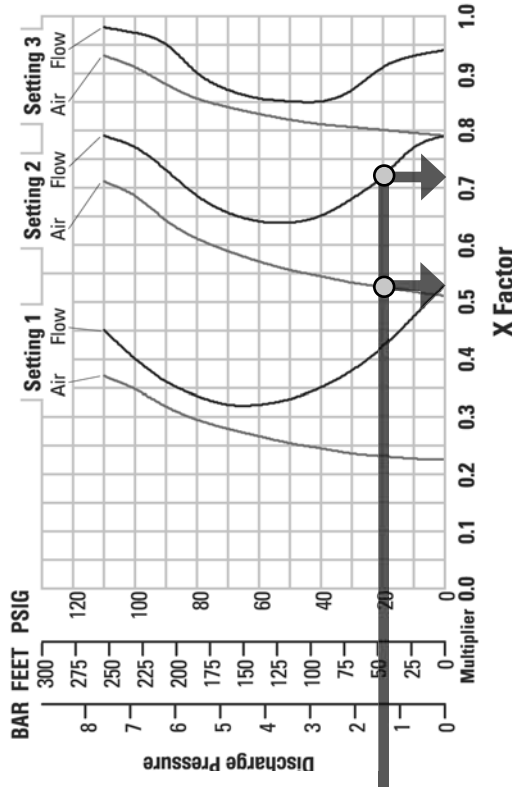

TECHNICAL DATA

Height	894 mm (35.2")
Width	541 mm (21.3")
Depth	419 mm (16.5")
Ship Weight ...	316 Stainless Steel 125 kg (275 lbs)
	Alloy C 130 kg (287 lbs)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	6.7 m Dry (22.1')
	9.5 m Wet (31.2')
Disp. Per Stroke	5.03 (1.33 gal.)
Max. Flow Rate	918 lpm (243 gpm)
Max. Size Solids	9.5 mm (3/8")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless steel, rubber-fitted pump operating at EMS setting 4, achieved a flow rate of 591 lpm (156 gpm) using 153 Nm³/h (90 scfm) of air when run at 4.1 bar (60 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.72 and the air "X factor" is 0.47 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 425 lpm (112 gpm) and an air consumption of 72 Nm³/h (42 scfm). The flow rate was reduced by 28% while the air consumption was reduced by 53%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 STAINLESS STEEL TPE-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

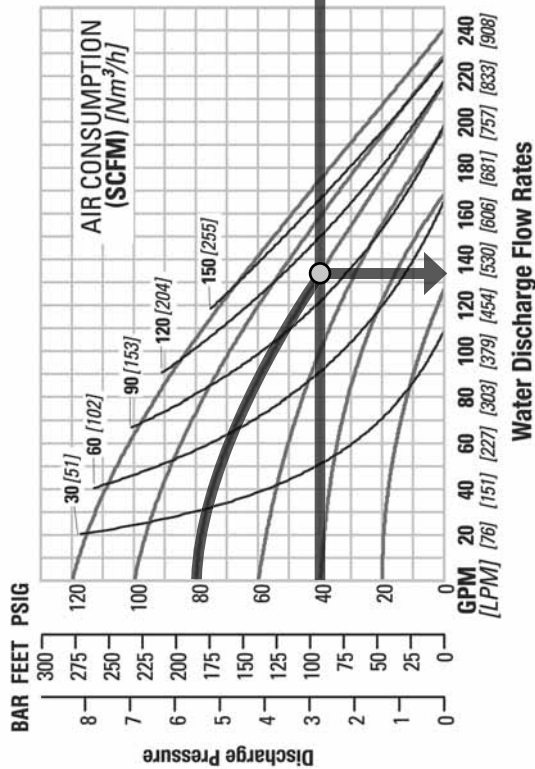

EMS CURVE

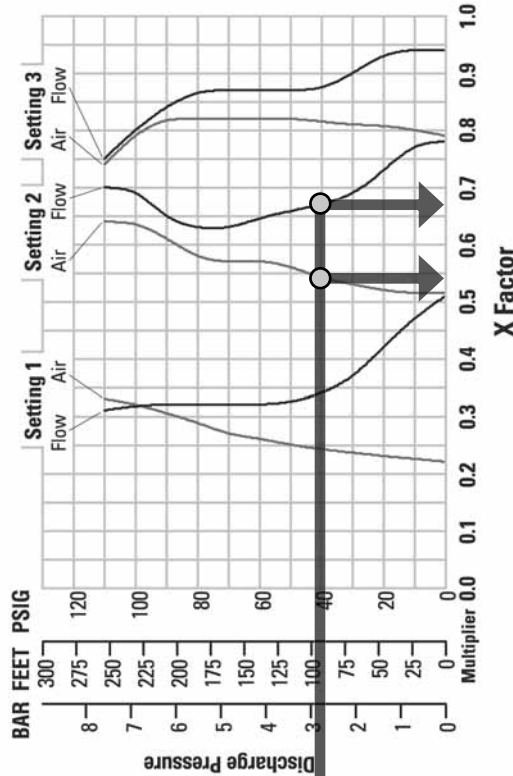

TECHNICAL DATA

Height894 mm (35.2")
Width541 mm (21.3")
Depth419 mm (16.5")
Ship Weight316 Stainless Steel 125 kg (275 lbs)
	Alloy C 130 kg (287 lbs)
Air Inlet19 mm (3/4")
Inlet76 mm (3")
Outlet76 mm (3")
Suction Lift6.2 m Dry (20.4')
	9.3 m Wet (30.6')
Disp. Per Stroke4.47 l (1.18 gal.)
Max. Flow Rate913 lpm (241 gpm)
Max. Size Solids9.5 mm (3/8")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless steel, TPE-fitted pump operating at EMS setting 4, achieved a flow rate of 503 lpm (133 gpm) using 175 Nm³/h (103 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.67 and the air "X factor" is 0.54 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 337 lpm (89 gpm) and an air consumption of 94 Nm³/h (56 scfm). The flow rate was reduced by 33% while the air consumption was reduced by 46%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 STAINLESS STEEL PTFE-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

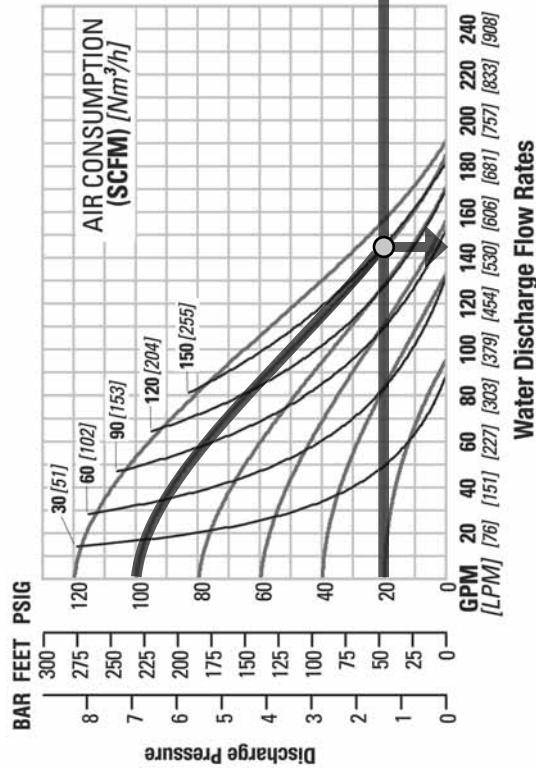

EMS CURVE

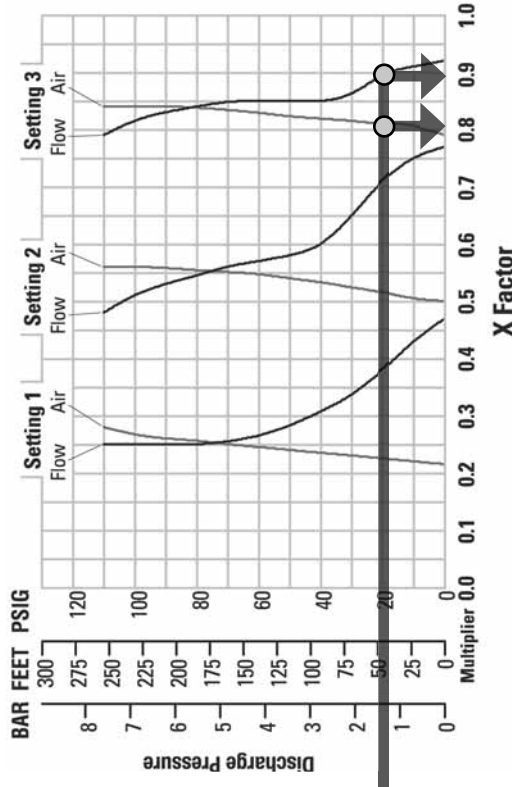

TECHNICAL DATA

Height	894 mm (35.2")
Width	541 mm (21.3")
Depth	419 mm (16.5")
Ship Weight	316 Stainless Steel 125 kg (275 lbs)
	Alloy C 130 kg (287 lbs)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	4.8 m Dry (15.9')
	9.5 m Wet (31.2')
Disp. Per Stroke	3.14 l (0.83 gal.)
Max. Flow Rate	727 lpm (192 gpm)
Max. Size Solids	9.5 mm (3/8")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

EXAMPLE

A PX1500 stainless steel, PTFE-fitted pump operating at EMS setting 4, achieved a flow rate of 545 lpm (144 gpm) using 253 Nm^3/h (149 scfm) of air when run at 6.9 bar (100 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 3 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 3, the flow "X factor" is 0.89 and the air "X factor" is 0.81 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 3 flow rate of 485 lpm (128 gpm) and an air consumption of 205 Nm^3/h (121 scfm). The flow rate was reduced by 11% while the air consumption was reduced by 19%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 STAINLESS STEEL FULL STROKE PTFE-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

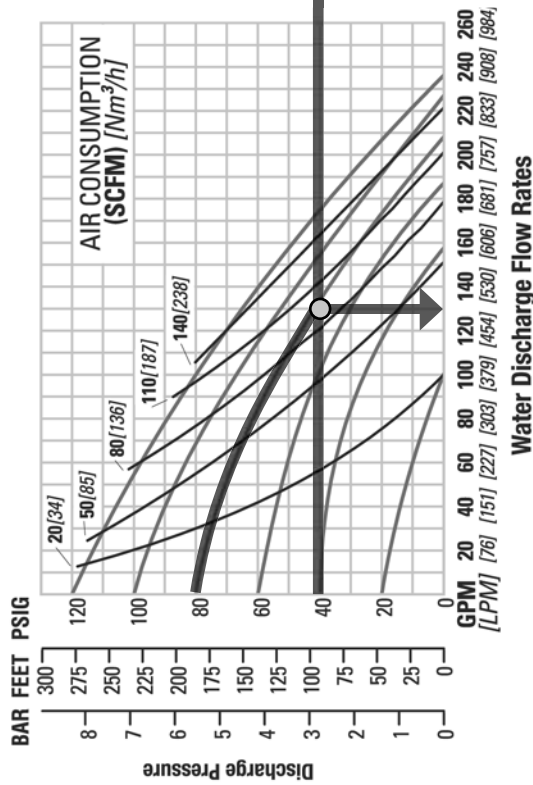

EMS CURVE

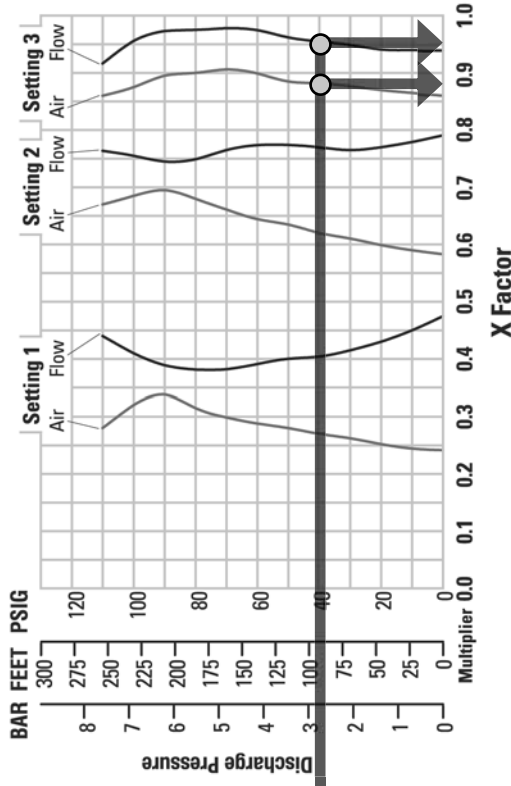

TECHNICAL DATA

Height	894 mm (35.2")
Width	541 mm (21.3")
Depth	419 mm (16.5")
Ship Weight	Stainless Steel 125 kg (275 lbs.)
	Alloy C 130 kg (287 lbs.)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	6.3m Dry (20.7')
	8.6 m Wet (28.4')
Disp. Per Stroke	5.0 l (1.31 gal.)
Max. Flow Rate	893 lpm (236.0 gpm)
Max. Size Solids	9.5 mm (3/8")

*Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless, Full Flow PTFE fitted pump operating at EMS setting 4, achieved a flow rate of 492 lpm (130 gpm) using 178 Nm³/h (105 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve).


The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 3 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 3, the flow "X factor" is 0.95 and the air "X factor" is 0.88 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 3 flow rate of 467 lpm (124 gpm) and an air consumption of 157 Nm³/h (92 scfm). The flow rate was reduced by 5% while the air consumption was reduced by 12%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

PX1500 STAINLESS STEEL ULTRA-FLEX™ FITTED

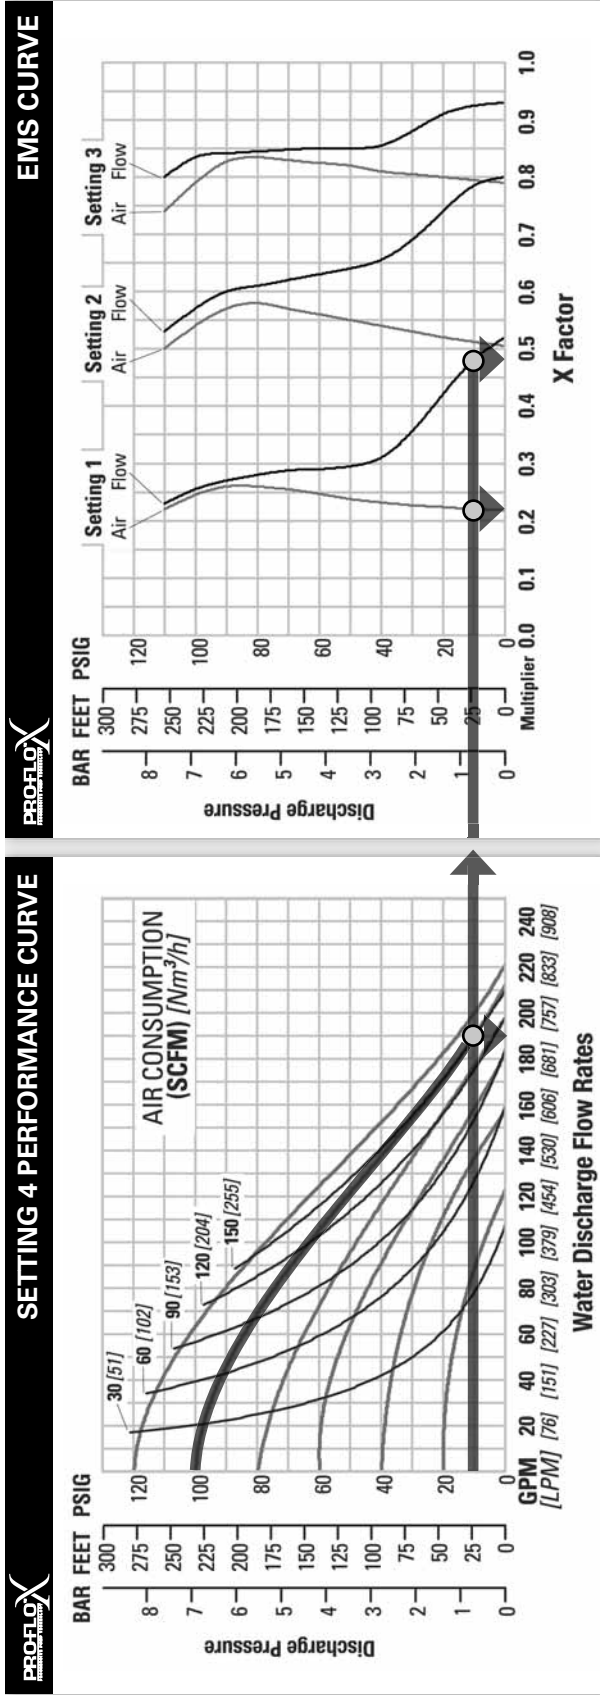

TECHNICAL DATA

Height894 mm (35.2")
Width541 mm (21.3")
Depth419 mm (16.5")
Ship Weight	...316 Stainless Steel 125 kg (275 lbs)
	Alloy C 130 kg (287 lbs)
Air Inlet19 mm (3/4")
Inlet76 mm (3")
Outlet76 mm (3")
Suction Lift6.2 m Dry (20.4')
	9.5 m Wet (31.2')
Disp. Per Stroke4.43 l (1.17 gal.) ¹
Max. Flow Rate8.40 lpm (222 gpm)
Max. Size Solids9.5 mm (3/8")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications.

The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless steel, Ultra-Flex-fitted pump operating at EMS setting 4, achieved a flow rate of 719 lpm (190 gpm) using 255 Nm³/h (150 scfm) of air when run at 6.9 bar (100 psig) air inlet pressure and 0.7 bar (10 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 0.7 bar (10 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.48 and the air "X factor" is 0.22 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 345 lpm (91 gpm) and an air consumption of 56 Nm³/h (33 scfm). The flow rate was reduced by 52% while the air consumption was reduced by 78%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 DROP-IN STAINLESS STEEL RUBBER-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

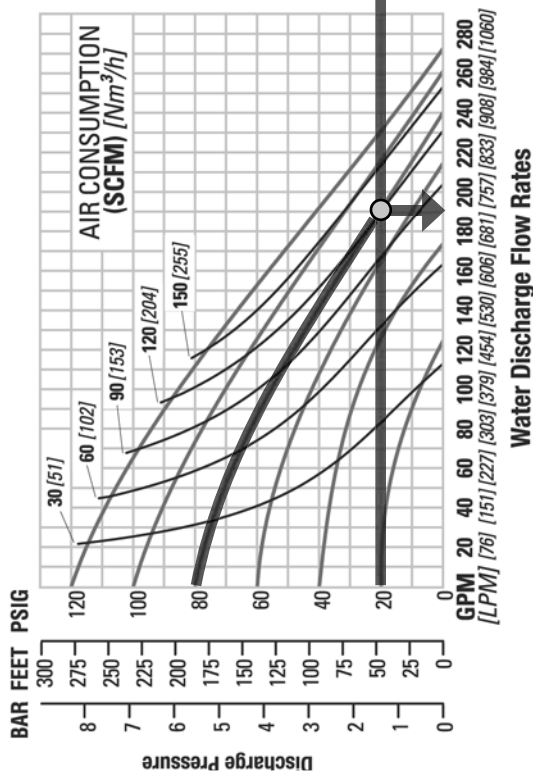

EMS CURVE

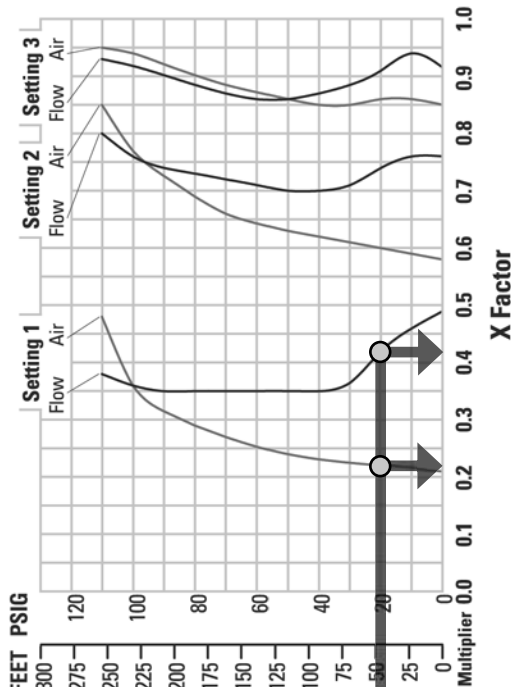

TECHNICAL DATA

Height	815 mm (32.1")
Width	650 mm (25.6")
Depth	422 mm (16.6")
Ship Weight	126 kg (278 lbs.)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	6.2 m Dry (20.4') 8.6 m Wet (28.4')
Disp. Per Stroke	5.1 l (1.36 gal.) ¹
Max. Flow Rate	1030 lpm (272 gpm)
Max. Size Solids	12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless steel, Rubber-fitted pump operating at EMS setting 4, achieved a flow rate of 727 lpm (192 gpm) using 206 Nm³/h (121 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 1 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 1, the flow "X factor" is 0.42 and the air "X factor" is 0.22 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 1 flow rate of 305 lpm (81 gpm) and an air consumption of 45 Nm³/h (27 scfm). The flow rate was reduced by 58% while the air consumption was reduced by 78%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 DROP-IN STAINLESS STEEL TPE-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

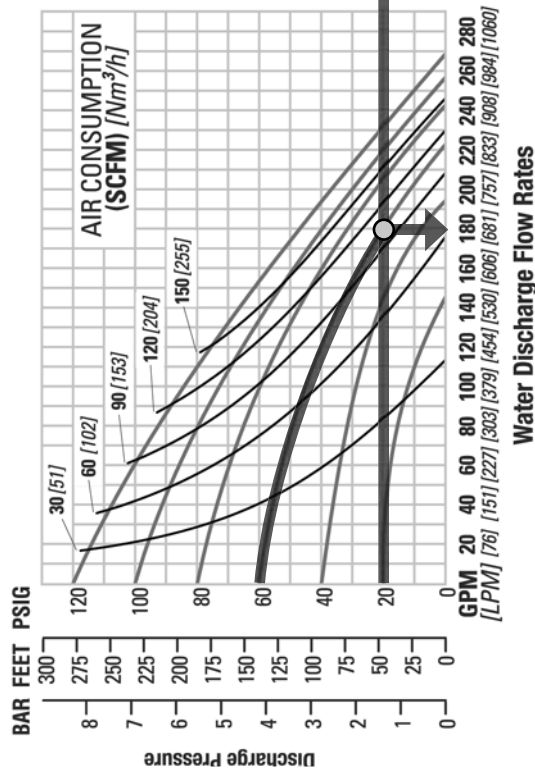

EMS CURVE

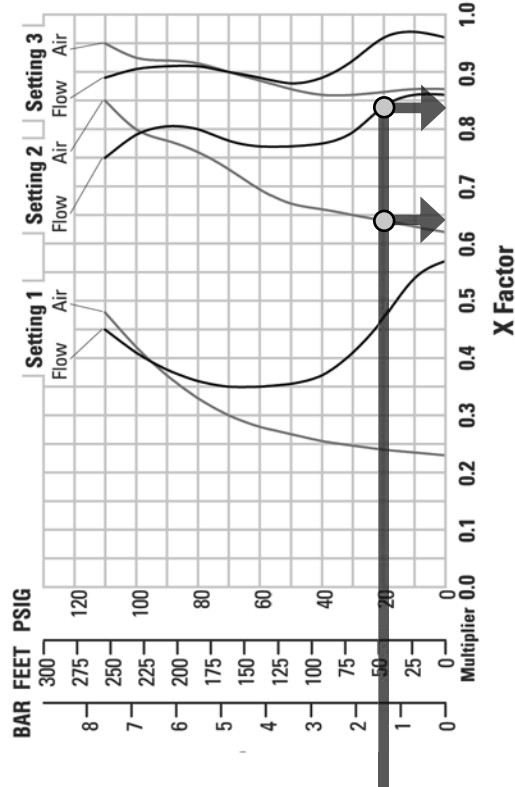

TECHNICAL DATA

Height	815 mm (32.1")
Width	650 mm (25.6")
Depth	422 mm (16.6")
Ship Weight	126 kg (278 lbs.)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	6.2 m Dry (20.4') 9.2 m Wet (30.1')
Disp. Per Stroke	5.8 l (1.52 gal.) ¹
Max. Flow Rate	1018 lpm (269 gpm)
Max. Size Solids	12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless steel, TPE-fitted pump operating at EMS setting 4, achieved a flow rate of 681 lpm (180 gpm) using 170 Nm³/h (100 scfm) of air when run at 4.1 bar (60 psig) air inlet pressure and 1.4 bar (20 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 1.4 bar (20 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.84 and the air "X factor" is 0.64 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 572 lpm (151 gpm) and an air consumption of 109 Nm³/h (64 scfm). The flow rate was reduced by 36% while the air consumption was reduced by 16%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 DROP-IN STAINLESS STEEL PTFE-FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

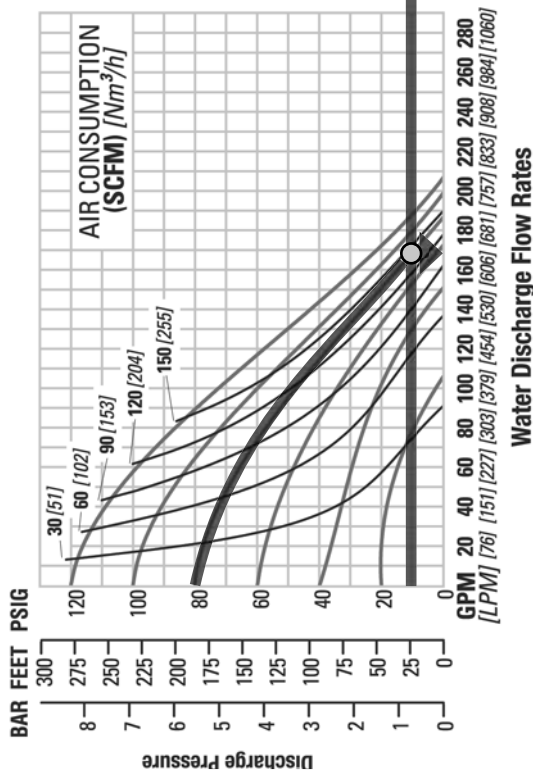

EMS CURVE

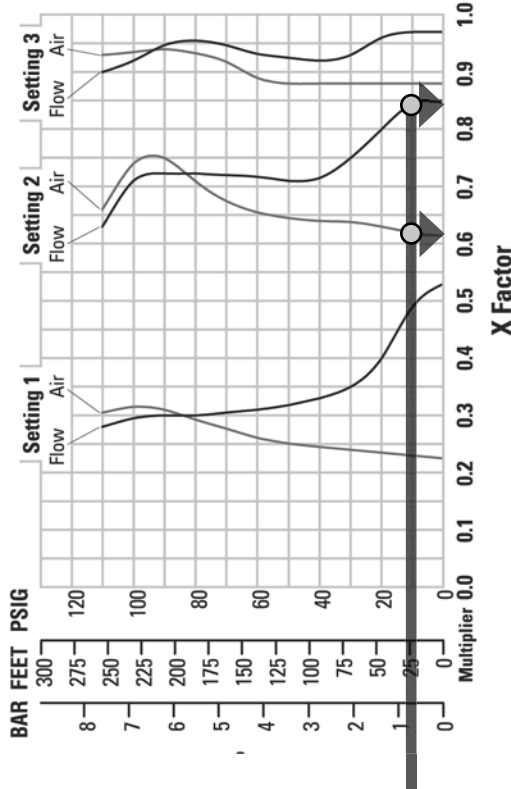

TECHNICAL DATA

Height815 mm (32.1")
Width650 mm (25.6")
Depth422 mm (16.6")
Ship Weight126 kg (278 lbs.)
Air Inlet19 mm (3/4")
Inlet76 mm (3")
Outlet76 mm (3")
Suction Lift4.5 m Dry (14.8') 9.0 m Wet (29.5')
Disp. Per Stroke3.5 l (0.92 gal.) ¹
Max. Flow Rate784 lpm (207 gpm)
Max. Size Solids12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless steel, PTFE-fitted pump operating at EMS setting 4, achieved a flow rate of 640 lpm (169 gpm) using 243 Nm³/h (143 scfm) of air when run at 5.5 bar (80 psig) air inlet pressure and 0.7 bar (10 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 0.7 bar (10 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.84 and the air "X factor" is 0.62 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 537 lpm (142 gpm) and an air consumption of 151 Nm³/h (89 scfm). The flow rate was reduced by 16% while the air consumption was reduced by 38%, thus providing increased efficiency.


For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

PX1500 DROP-IN STAINLESS STEEL FULL STROKE PTFE-FITTED



PERFORMANCE

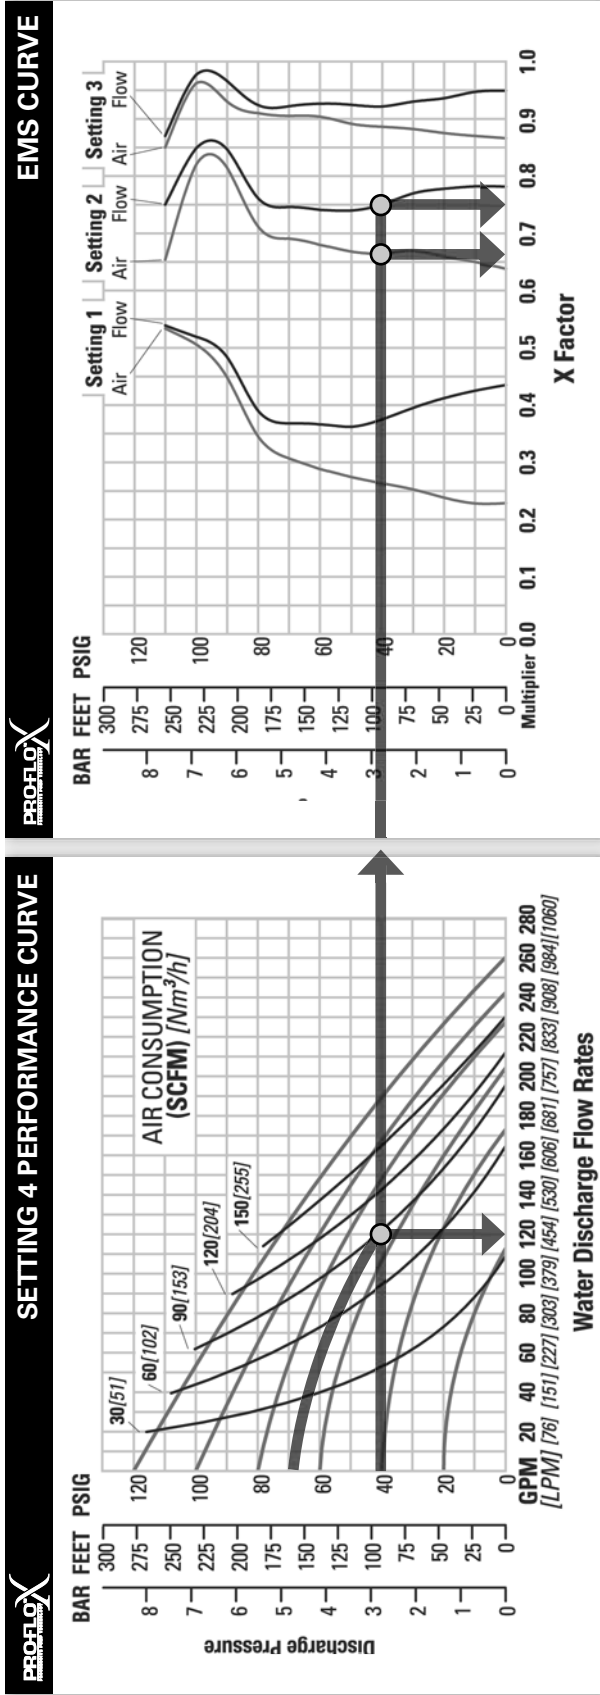

TECHNICAL DATA

Height815 mm (32.1")
Width650 mm (25.6")
Depth422 mm (16.6")
Ship Weight126 kg (278 lbs.)
Air Inlet19 mm (3/4")
Inlet76 mm (3")
Outlet76 mm (3")
Suction Lift6.1m Dry (19.9') 9.3 m Wet (30.6')
Disp. Per Stroke5.2 l (1.38 gal.) ¹
Max. Flow Rate985 lpm (260.1 gpm)
Max. Size Solids12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2.1 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless steel, Full Flow PTFE fitted pump operating at EMS setting 4, achieved a flow rate of 454 lpm (120 gpm) using 155 Nm³/h (91 scfm) of air when run at 4.7 bar (68 psig) air inlet pressure and 2.8 bar (40 psig) discharge pressure (See dot on performance curve). The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 2.8 bar (40 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.75 and the air "X factor" is 0.66 (see dots on EMS curve).

Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 341 lpm (90 gpm) and an air consumption of 102 Nm³/h (60 scfm). The flow rate was reduced by 25% while the air consumption was reduced by 34%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.

Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.


PX1500 DROP-IN STAINLESS STEEL ULTRA-FLEX™ FITTED




PERFORMANCE



SETTING 4 PERFORMANCE CURVE

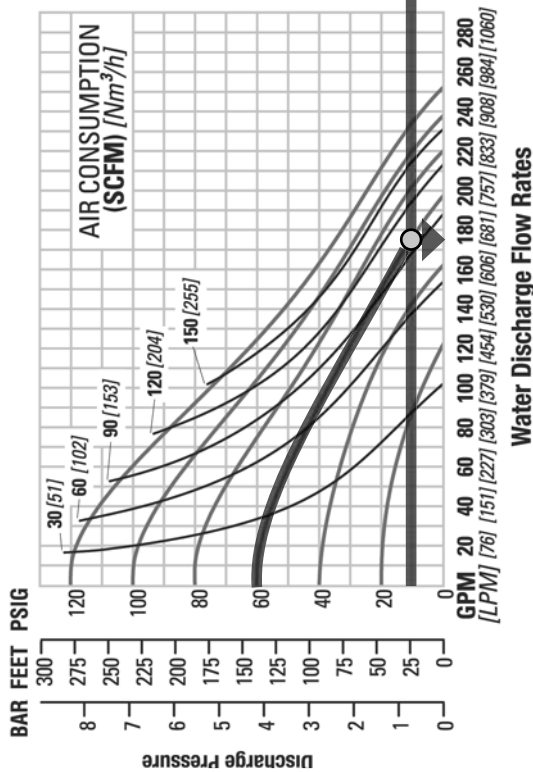

EMS CURVE

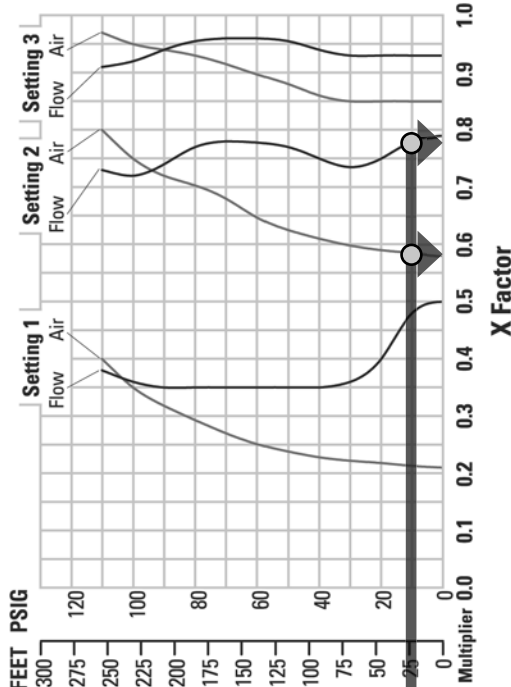

TECHNICAL DATA

Height	815 mm (32.1")
Width	650 mm (25.6")
Depth	422 mm (16.6")
Ship Weight	126 kg (278 lbs.)
Air Inlet	19 mm (3/4")
Inlet	76 mm (3")
Outlet	76 mm (3")
Suction Lift	5.9 m Dry (19.3') 8.6 m Wet (28.4')
Disp. Per Stroke	4.3 l (1.13 gal.) ¹
Max. Flow Rate	.954 lpm (252 gpm)
Max. Size Solids	12.7 mm (1/2")

¹Displacement per stroke was calculated at 4.8 bar (70 psig) air inlet pressure against a 2 bar (30 psig) head pressure.

The Efficiency Management System (EMS) can be used to optimize the performance of your Wilden pump for specific applications. The pump is delivered with the EMS adjusted to setting 4, which allows maximum flow.

The EMS curve allows the pump user to determine flow and air consumption at each EMS setting. For any EMS setting and discharge pressure, the "X factor" is used as a multiplier with the original values from the setting 4 performance curve to calculate the actual flow and air consumption values for that specific EMS setting. Note: you can interpolate between the setting curves for operation at intermediate EMS settings.

EXAMPLE

A PX1500 stainless steel, Ultra-Flex-fitted pump operating at EMS setting 4, achieved a flow rate of 666 lpm (176 gpm) using 170 Nm³/h (100 scfm) of air when run at 4.1 bar (60 psig) air inlet pressure and 0.7 bar (10 psig) discharge pressure (See dot on performance curve).

The end user did not require that much flow and wanted to reduce air consumption at his facility. He determined that EMS setting 2 would meet his needs. At 0.7 bar (10 psig) discharge pressure and EMS setting 2, the flow "X factor" is 0.78 and the air "X factor" is 0.58 (see dots on EMS curve).


Multiplying the original setting 4 values by the "X factors" provides the setting 2 flow rate of 520 lpm (137 gpm) and an air consumption of 99 Nm³/h (58 scfm). The flow rate was reduced by 22% while the air consumption was reduced by 42%, thus providing increased efficiency.

For a detailed example for how to set your EMS, see beginning of performance curve section.


Caution: Do not exceed 8.6 bar (125 psig) air supply pressure.

SUCTION LIFT CURVES

PX1500 ALUMINUM SUCTION LIFT CAPABILITY

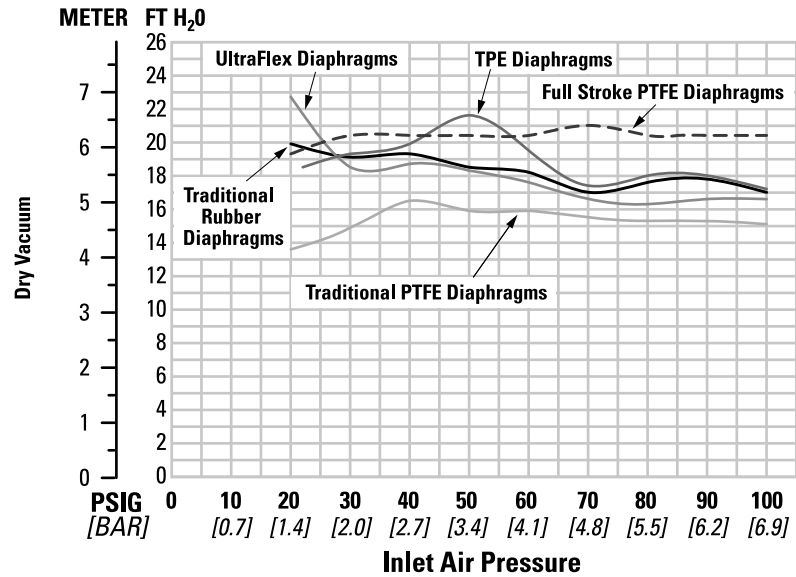


PX1500 STAINLESS STEEL & ALLOY C SUCTION LIFT CAPABILITY

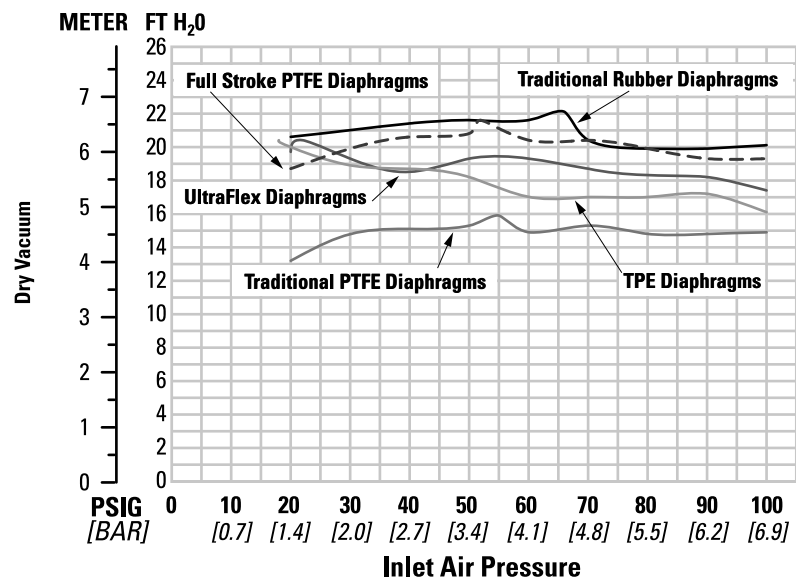

SUCTION LIFT CURVES

PX1500 STAINLESS STEEL DROP-IN SUCTION LIFT CAPABILITY

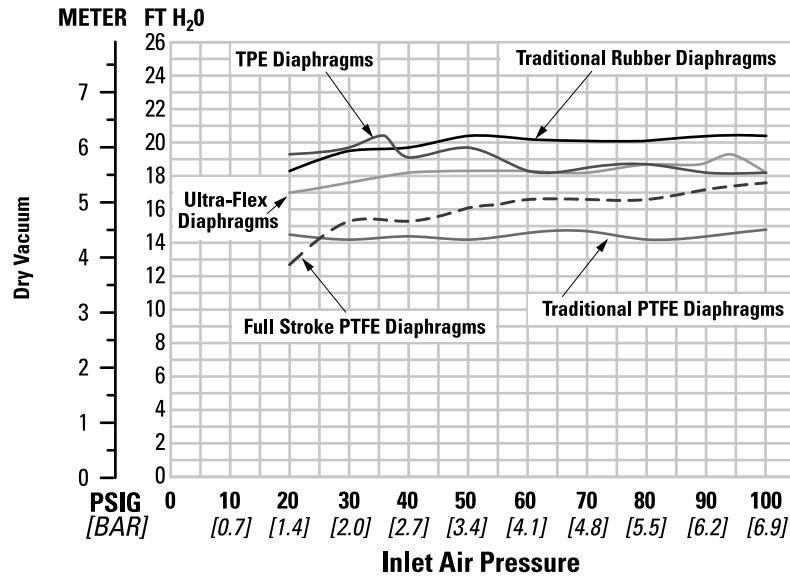

NOTES

Wilden pumps are designed to meet the performance requirements of even the most demanding pumping applications. They have been designed and manufactured to the highest standards and are available in a variety of liquid path materials to meet your chemical resistance needs. Refer to the performance section of this manual for an in-depth analysis of the performance characteristics of your pump. Wilden offers the widest variety of elastomer options in the industry to satisfy temperature, chemical compatibility, abrasion resistance and flex concerns.

The suction pipe size should be at least the equivalent or larger than the diameter size of the suction inlet on your Wilden pump. The suction hose must be non-collapsible, reinforced type as these pumps are capable of pulling a high vacuum. Discharge piping should also be the equivalent or larger than the diameter of the pump discharge which will help reduce friction losses. It is critical that all fittings and connections are airtight or a reduction or loss of pump suction capability will result.

INSTALLATION: Months of careful planning, study, and selection efforts can result in unsatisfactory pump performance if installation details are left to chance.

Premature failure and long term dissatisfaction can be avoided if reasonable care is exercised throughout the installation process.

LOCATION: Noise, safety, and other logistical factors usually dictate where equipment will be situated on the production floor. Multiple installations with conflicting requirements can result in congestion of utility areas, leaving few choices for additional pumps.

Within the framework of these and other existing conditions, every pump should be located in such a way that six key factors are balanced against each other to maximum advantage.

ACCESS: First of all, the location should be accessible. If it's easy to reach the pump, maintenance personnel will have an easier time carrying out routine inspections and adjustments. Should major repairs become necessary, ease of access can play a key role in speeding the repair process and reducing total downtime.

AIR SUPPLY: Every pump location should have an air line large enough to supply the volume of air necessary to achieve the desired pumping rate. Use air pressure up to a maximum of 8.6 bar (125 psig) depending on pumping requirements.

For best results, the pumps should use a 5 μ (micron) air filter, needle valve and regulator. The use of an air filter before the pump will ensure that the majority of any pipeline contaminants will be eliminated.

SOLENOID OPERATION: When operation is controlled by a solenoid valve in the air line, three-way valves should be used. This valve allows trapped air between the valve and the pump to bleed off which improves pump performance. Pumping volume can be estimated by counting the number of strokes per minute and then multiplying the figure by the displacement per stroke.

MUFFLER: Sound levels are reduced below OSHA

specifications using the standard Wilden muffler. Other mufflers can be used to further reduce sound levels, but they usually reduce pump performance.

ELEVATION: Selecting a site that is well within the pump's dynamic lift capability will assure that loss-of-prime issues will be eliminated. In addition, pump efficiency can be adversely affected if proper attention is not given to site location.

PIPING: Final determination of the pump site should not be made until the piping challenges of each possible location have been evaluated. The impact of current and future installations should be considered ahead of time to make sure that inadvertent restrictions are not created for any remaining sites.

The best choice possible will be a site involving the shortest and straightest hook-up of suction and discharge piping. Unnecessary elbows, bends, and fittings should be avoided. Pipe sizes should be selected to keep friction losses within practical limits. All piping should be supported independently of the pump. In addition, the piping should be aligned to avoid placing stress on the pump fittings.

Flexible hose can be installed to aid in absorbing the forces created by the natural reciprocating action of the pump. If the pump is to be bolted down to a solid location, a mounting pad placed between the pump and the foundation will assist in minimizing pump vibration. Flexible connections between the pump and rigid piping will also assist in minimizing pump vibration. If quick-closing valves are installed at any point in the discharge system, or if pulsation within a system becomes a problem, a surge suppressor (SD Equalizer[®]) should be installed to protect the pump, piping and gauges from surges and water hammer.

If the pump is to be used in a self-priming application, make sure that all connections are airtight and that the suction lift is within the model's ability. Note: Materials of construction and elastomer material have an effect on suction lift parameters. Please refer to the performance section for specifics.

When pumps are installed in applications involving flooded suction or suction head pressures, a gate valve should be installed in the suction line to permit closing of the line for pump service.

Pumps in service with a positive suction head are most efficient when inlet pressure is limited to 0.5–0.7 bar (7–10 psig). Premature diaphragm failure may occur if positive suction is 0.7 bar (10 psig) and higher.

SUBMERSIBLE APPLICATIONS: Pro-Flo X[™] pumps can be used for submersible applications, when using the Pro-Flo X[™] submersible option. Turbo-Flo[™] pumps can also be used for submersible applications.


NOTE: Pro-Flo[®] and Accu-Flo[™] pumps are not submersible.

ALL WILDEN PUMPS ARE CAPABLE OF PASSING SOLIDS. A STRAINER SHOULD BE USED ON THE PUMP INTAKE TO ENSURE THAT THE PUMP'S RATED SOLIDS CAPACITY IS NOT EXCEEDED.

CAUTION: DO NOT EXCEED 8.6 BAR (125 PSIG) AIR SUPPLY PRESSURE.

SUGGESTED INSTALLATION

This illustration is a generic representation of an air-operated double-diaphragm pump.

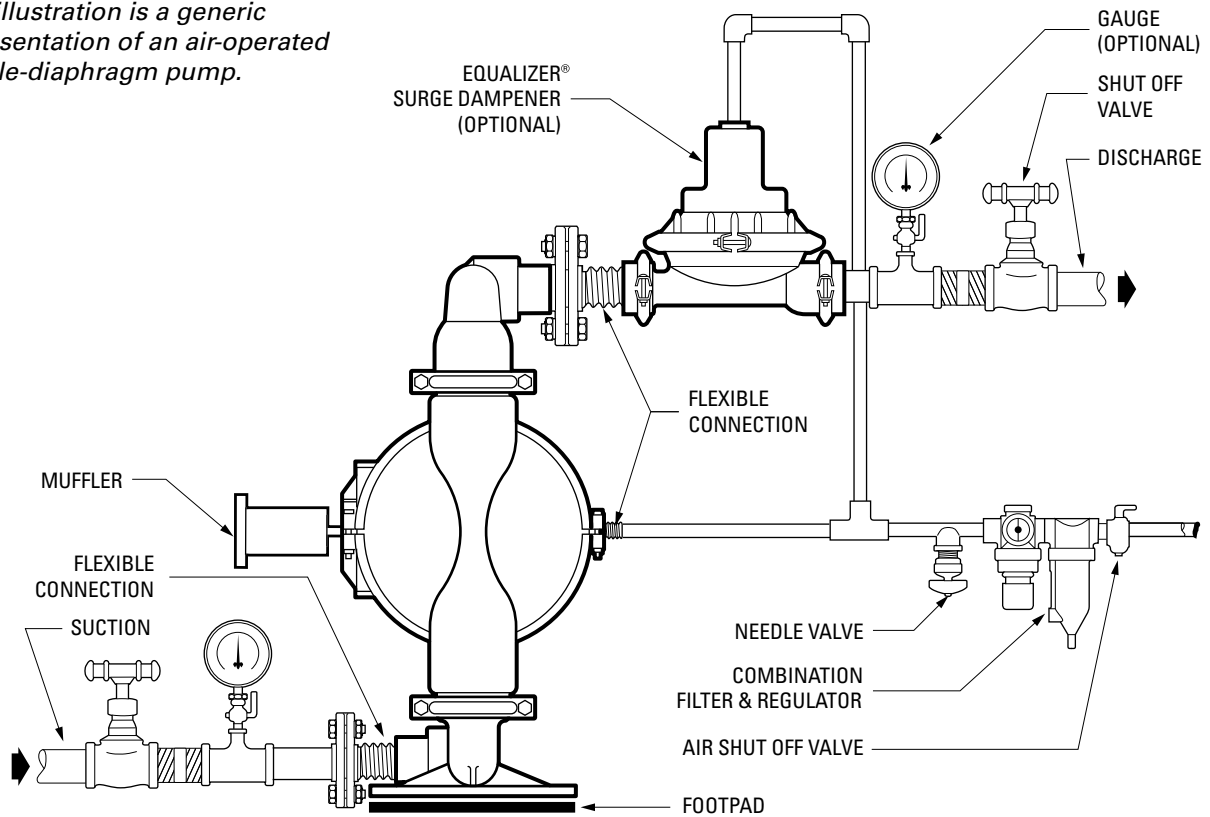

NOTE: In the event of a power failure, the shut off valve should be closed, if the restarting of the pump is not desirable once power is regained.

AIR OPERATED PUMPS: To stop the pump from operating in an emergency situation, simply close the

shut off valve (user supplied) installed in the air supply line. A properly functioning valve will stop the air supply to the pump, therefore stopping output. This shut off valve should be located far enough away from the pumping equipment such that it can be reached safely in an emergency situation.

SUGGESTED OPERATION & MAINTENANCE

OPERATION: The PX1500 is pre-lubricated, and does not require in-line lubrication. Additional lubrication will not damage the pump, however if the pump is heavily lubricated by an external source, the pump's internal lubrication may be washed away. If the pump is then moved to a non-lubricated location, it may need to be disassembled and re-lubricated as described in the ASSEMBLY/DISASSEMBLY INSTRUCTIONS.

Pump discharge rate can be controlled by limiting the volume and/or pressure of the air supply to the pump. An air regulator is used to regulate air pressure. A needle valve is used to regulate volume. Pump discharge rate can also be controlled by throttling the pump discharge by partially closing a valve in the discharge line of the pump. This action increases friction loss which reduces flow rate. (See Section 5.) This is useful when the need exists to control the pump from a remote location. When the pump discharge pressure equals or exceeds the air supply pressure, the pump will stop; no bypass or pressure relief valve is needed, and pump damage will not occur. The pump has reached a "deadhead" situation and can be restarted by reducing the fluid

discharge pressure or increasing the air inlet pressure. The Wilden PX1500 pump runs solely on compressed air and does not generate heat, therefore your process fluid temperature will not be affected.

MAINTENANCE AND INSPECTIONS: Since each application is unique, maintenance schedules may be different for every pump. Frequency of use, line pressure, viscosity and abrasiveness of process fluid all affect the parts life of a Wilden pump. Periodic inspections have been found to offer the best means for preventing unscheduled pump downtime. Personnel familiar with the pump's construction and service should be informed of any abnormalities that are detected during operation.

RECORDS: When service is required, a record should be made of all necessary repairs and replacements. Over a period of time, such records can become a valuable tool for predicting and preventing future maintenance problems and unscheduled downtime. In addition, accurate records make it possible to identify pumps that are poorly suited to their applications.

TROUBLESHOOTING

Pump will not run or runs slowly.

1. Ensure that the air inlet pressure is at least 0.4 bar (5 psig) above startup pressure and that the differential pressure (the difference between air inlet and liquid discharge pressures) is not less than 0.7 bar (10 psig).
2. Check air inlet filter for debris (see recommended installation).
3. Check for extreme air leakage (blow by) which would indicate worn seals/bore in the air valve, pilot spool, main shaft.
4. Disassemble pump and check for obstructions in the air passageways or objects which would obstruct the movement of internal parts.
5. Check for sticking ball check valves. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and seals with proper elastomers. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.
6. Check for broken inner piston which will cause the air valve spool to be unable to shift.
7. Remove plug from pilot spool exhaust.

Pump runs but little or no product flows.

1. Check for pump cavitation; slow pump speed down to allow thick material to flow into liquid chambers.

2. Verify that vacuum required to lift liquid is not greater than the vapor pressure of the material being pumped (cavitation).
3. Check for sticking ball check valves. If material being pumped is not compatible with pump elastomers, swelling may occur. Replace ball check valves and seats with proper elastomers. Also, as the check valve balls wear out, they become smaller and can become stuck in the seats. In this case, replace balls and seats.

Pump air valve freezes.

1. Check for excessive moisture in compressed air. Either install a dryer or hot air generator for compressed air. Alternatively, a coalescing filter may be used to remove the water from the compressed air in some applications.

Air bubbles in pump discharge.

1. Check for ruptured diaphragm.
2. Check tightness of outer pistons (refer to Section 7.)
3. Check tightness of fasteners and integrity of o-rings and seals, especially at intake manifold.
4. Ensure pipe connections are airtight.

Product comes out air exhaust.


1. Check for diaphragm rupture.
2. Check tightness of outer pistons to shaft.

PUMP DISASSEMBLY**Tools Required:**

- 15/16" Wrench
- Adjustable Wrench
- Vise equipped w/
soft jaws (such as
plywood, plastic
or other suitable
material)

CAUTION: Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of any hazardous effects of contact with your process fluid.

NOTE: The model photographed for these instructions incorporates rubber diaphragms, balls, and seats. Models with PTFE diaphragms, balls and seats are the same except where noted.

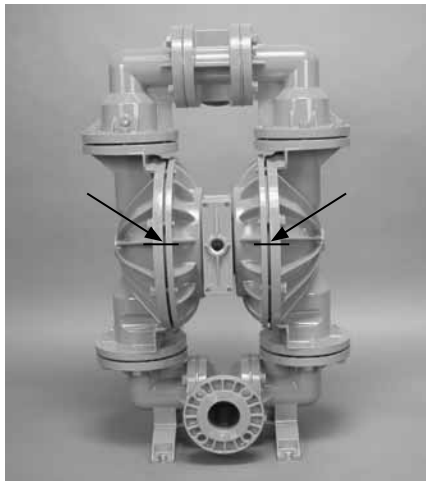**Step 1**

Please note alignment marks on liquid chamber. Use to properly align center section to liquid chamber.

**Step 2**

Using a 15/16" wrench, loosen the discharge manifold from the liquid chambers.


**Step 3**

Remove the discharge manifold to expose the valve balls and valve seats. Inspect ball cage area of manifold for excessive wear or damage.



Step 4

After removing discharge valve balls and valve seats, from the discharge manifold and liquid chamber, inspect for nicks, gouges, chemical attack or abrasive wear. Note: Replace worn parts with genuine Wilden parts for reliable performance.

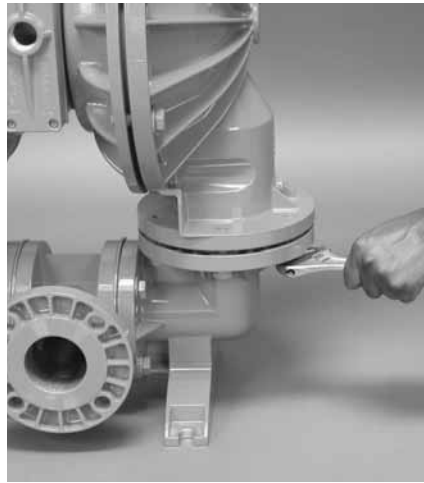

Step 5

Using a 15/16" wrench, loosen the inlet manifold from the liquid chambers.



Step 6

Remove the inlet valve balls and valve seats from the inlet manifold and inspect for nicks, gouges, chemical attack or abrasive wear.



Step 7

Using a 15/16" wrench, loosen the liquid chamber from the center section.



Step 8

The liquid chamber should be removed to expose the diaphragm and outer piston.



Step 9

Using one adjustable wrench, loosen the diaphragm assembly from the center section assembly.



Step 10A

Note: Due to varying torque values, one of the following two situations will occur. 1) The outer piston, diaphragm and inner piston remain attached to the shaft and the entire assembly can be removed from the center section.



Step 10B

2) The outer piston, diaphragm and inner piston separate from the shaft which remains connected to the opposite side liquid chamber. Inspect diaphragm assembly and shaft for signs of wear or chemical attack. Replace all worn parts with genuine Wilden parts for reliable performance.

Finding A Spares Nightmare?



PRODUCTS:
AODDP
(Air Operated Double Diaphragm Pumps)

- Warren-Rupp®
- ARO®
- Other



PUMP PARTS
(Low Cost)

- Diaphragms
- Valve balls
- Valve seats



KNOWLEDGE & SERVICE

- Competitive pricing
- Delivery
- Service
- Inventory

Sleep easier with



SPECTROM
AFTERMARKET PUMP PARTS

Spectrom is not your typical after market part supplier. We do not simply sell pump parts; we provide value added procurement solutions.

Our unique network enables us to purchase effectively, resulting in low cost solutions. We also know that low purchase price is not enough - quality, integrity and inventory are also important. Spectrom is structured to provide Pre and Post sales support, giving our customers value added application and pump knowledge.

Contact us to have a procurement solution developed for you. We don't just fit you into a generic system, we develop specific solutions that achieve results.

Spectrom will ship your order from our facility within 3 working days!

WARNING: These parts may exhibit better life than OEM parts.



SPECTROM
AFTERMARKET PUMP PARTS

1-909-512-1261 www.spectromparts.com

AIR VALVE / CENTER SECTION DISASSEMBLY

Tools Required:

- 3/16" Hex Head Wrench
- 1/4" Hex Head Wrench
- Snap Ring Pliers
- O-Ring Pick

CAUTION: Before any maintenance or repair is attempted, the compressed air line to the pump should be disconnected and all air pressure allowed to bleed from the pump. Disconnect all intake, discharge, and air lines. Drain the pump by turning it upside down and allowing any fluid to flow into a suitable container. Be aware of hazardous effects of contact with your process fluid.

The Wilden PX1500 metal pumps utilize a revolutionary Pro-Flo[®] air distribution system. Proprietary composite seals reduce the coefficient of friction and allow the PX1500 to run lube-free. Constructed of polypropylene or aluminum, the Pro-Flo[®] air distribution system is designed to perform in on/off, non-freezing, non-stalling, tough duty applications.



Step 1

Using a 3/16" Hex head wrench, loosen air valve bolts.



Step 2

Remove muffler plate and air valve bolts from air valve assembly exposing muffler gasket for inspection. Replace if necessary.



Step 3

Lift away air valve assembly and remove air valve gasket for inspection. Replace if necessary.

AIR VALVE / CENTER SECTION DISASSEMBLY



Step 4

Remove air valve end cap to expose air valve spool by simply lifting up on end cap once air valve bolts are removed. Note: Pro-Flo X™ air valve incorporates an end cap at both ends of the air valve.



Step 5

Remove the air valve spool from the air valve body by threading one air valve bolt into the end of the air valve spool and gently sliding the spool out of the air valve body. Inspect seals for signs of wear and replace entire assembly if necessary. Use caution when handling air valve spool to prevent damaging seals. Note: Seals should not be removed from assembly. Seals are not sold separately.



Step 6

Remove pilot sleeve retaining snap ring on both sides of center section with snap ring pliers.




Step 7

Remove pilot spool sleeve from center section.



Step 8

Using an o-ring pick, gently remove the o-ring from the opposite side of the "notched end" on one side of the pilot spool. Gently remove the pilot spool from pilot spool sleeve and inspect for nick, gouges and wear. Replace pilot sleeve or outer sleeve o-rings if necessary. During re-assembly, never insert the pilot spool into the sleeve with the "notched end" first, this end incorporates the urethane o-ring and will be damaged as it slides over the ports cut in the sleeve. Note: Seals should not be removed from pilot spool. Seals are not sold separately.

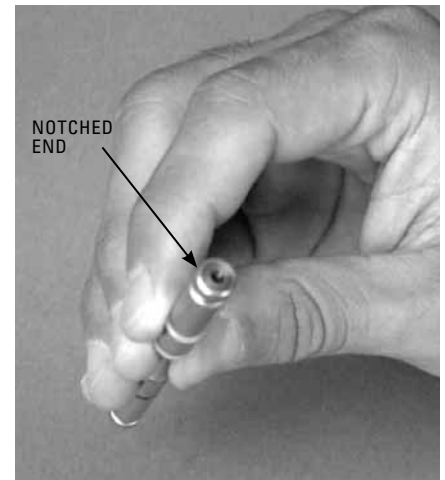


AIR VALVE / CENTER SECTION DISASSEMBLY



Step 9


Check center section shaft seals for signs of wear. If necessary, remove the shaft seals with o-ring pick and replace.

SUBMERSIBLE PRO-FLO X™

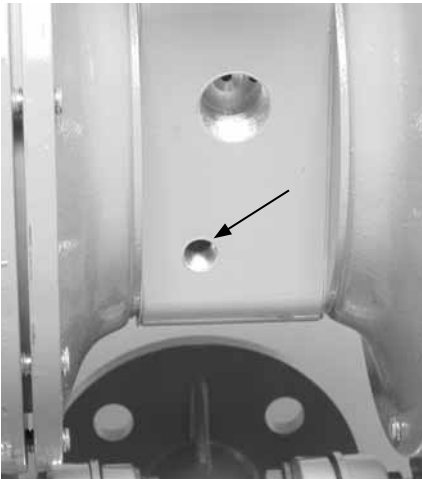

Step 1

Install a 6 mm (1/4") NPT pipe plug (00-7010-08) into the pilot spool bleed port located at the front of the center block.

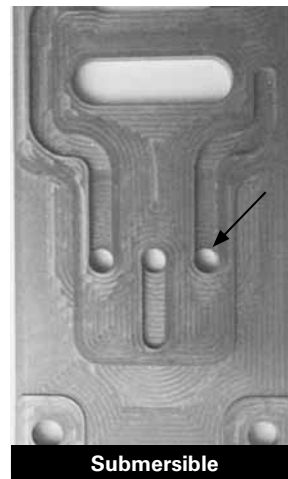

Step 2

Next, install an optional submersible air valve gasket (04-2621-52). The submersible air valve gasket can be purchased as a spare part or included with the purchase of a new Pro-Flo X™ pump.

REASSEMBLY HINTS & TIPS

ASSEMBLY:

Upon performing applicable maintenance to the air distribution system, the pump can now be reassembled. Please refer to the disassembly instructions for photos and parts placement. To reassemble the pump, follow the disassembly instructions in reverse order. The air distribution system needs to be assembled first, then the diaphragms and finally the wetted path. Please find the applicable torque specifications on this page. The following tips will assist in the assembly process.

- Lubricate air valve bore, center section shaft and pilot spool bore with NLGI grade 2 white EP bearing grease or equivalent.
- Clean the inside of the center section shaft bore to ensure no damage is done to new shaft seals.
- A small amount of NLGI grade 2 white EP bearing grease can be applied to the muffler and air valve gaskets to locate gaskets during assembly.
- Make sure that the exhaust port on the muffler plate is centered between the two exhaust ports on the center section.
- Stainless bolts should be lubed to reduce the possibility of seizing during tightening.

Pro-Flo X™ MAXIMUM TORQUE SPECIFICATIONS

Description of Part	Torque
Air Valve	13.6 N•m (120 in-lbs)
Air Chamber/Center Block	27.1 N•m (20 ft-lbs)
Inner Piston Ring	19.0 N•m (14 ft-lbs)
Outer Pistons, Rubber & PTFE	135.6 N•m (100 ft-lbs)
Outer Pistons, Ultra-Flex™	135.6 N•m (100 ft-lbs)

SHAFT SEAL INSTALLATION:

PRE-INSTALLATION

- Once all of the old seals have been removed, the inside of the bushing should be cleaned to ensure no debris is left that may cause premature damage to the new seals.

INSTALLATION

The following tools can be used to aid in the installation of the new seals:

Needle Nose Pliers
Phillips Screwdriver
Electrical Tape

- Wrap electrical tape around each leg of the needle nose pliers (heat shrink tubing may also be used). This is done to prevent damaging the inside surface of the new seal.
- With a new seal in hand, place the two legs of the needle nose pliers inside the seal ring. (See Figure A.)
- Open the pliers as wide as the seal diameter will allow, then with two fingers pull down on the top portion of the seal to form kidney bean shape. (See Figure B.)
- Lightly clamp the pliers together to hold the seal into the kidney shape. Be sure to pull the seal into as tight of a kidney shape as possible, this will allow the seal to travel down the bushing bore with greater ease.
- With the seal clamped in the pliers, insert the seal into the bushing bore and position the bottom of the seal into the correct groove. Once the bottom of the seal is seated in the groove, release the clamp pressure on the pliers. This will allow the seal to partially snap back to its original shape.
- After the pliers are removed, you will notice a slight bump in the seal shape. Before the seal can be properly resized, the bump in the seal should be removed as much as possible. This can be done with either the Phillips screwdriver or your finger. With either the side of the screwdriver or your finger, apply light pressure to the peak of the bump. This pressure will cause the bump to be almost completely eliminated.
- Lubricate the edge of the shaft with NLGI grade 2 white EP bearing grease.
- Slowly insert the center shaft with a rotating motion. This will complete the resizing of the seal.
- Perform these steps for the remaining seal.

Figure A


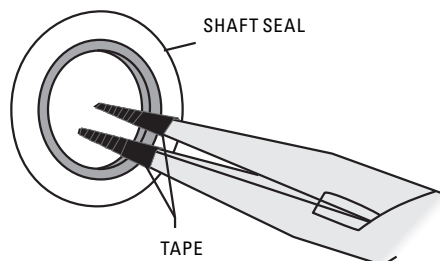



Figure B

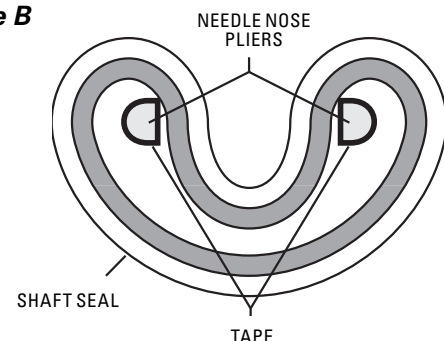

EXPLODED VIEW & PARTS LISTING

PX1500 ALUMINUM

EXPLODED VIEW

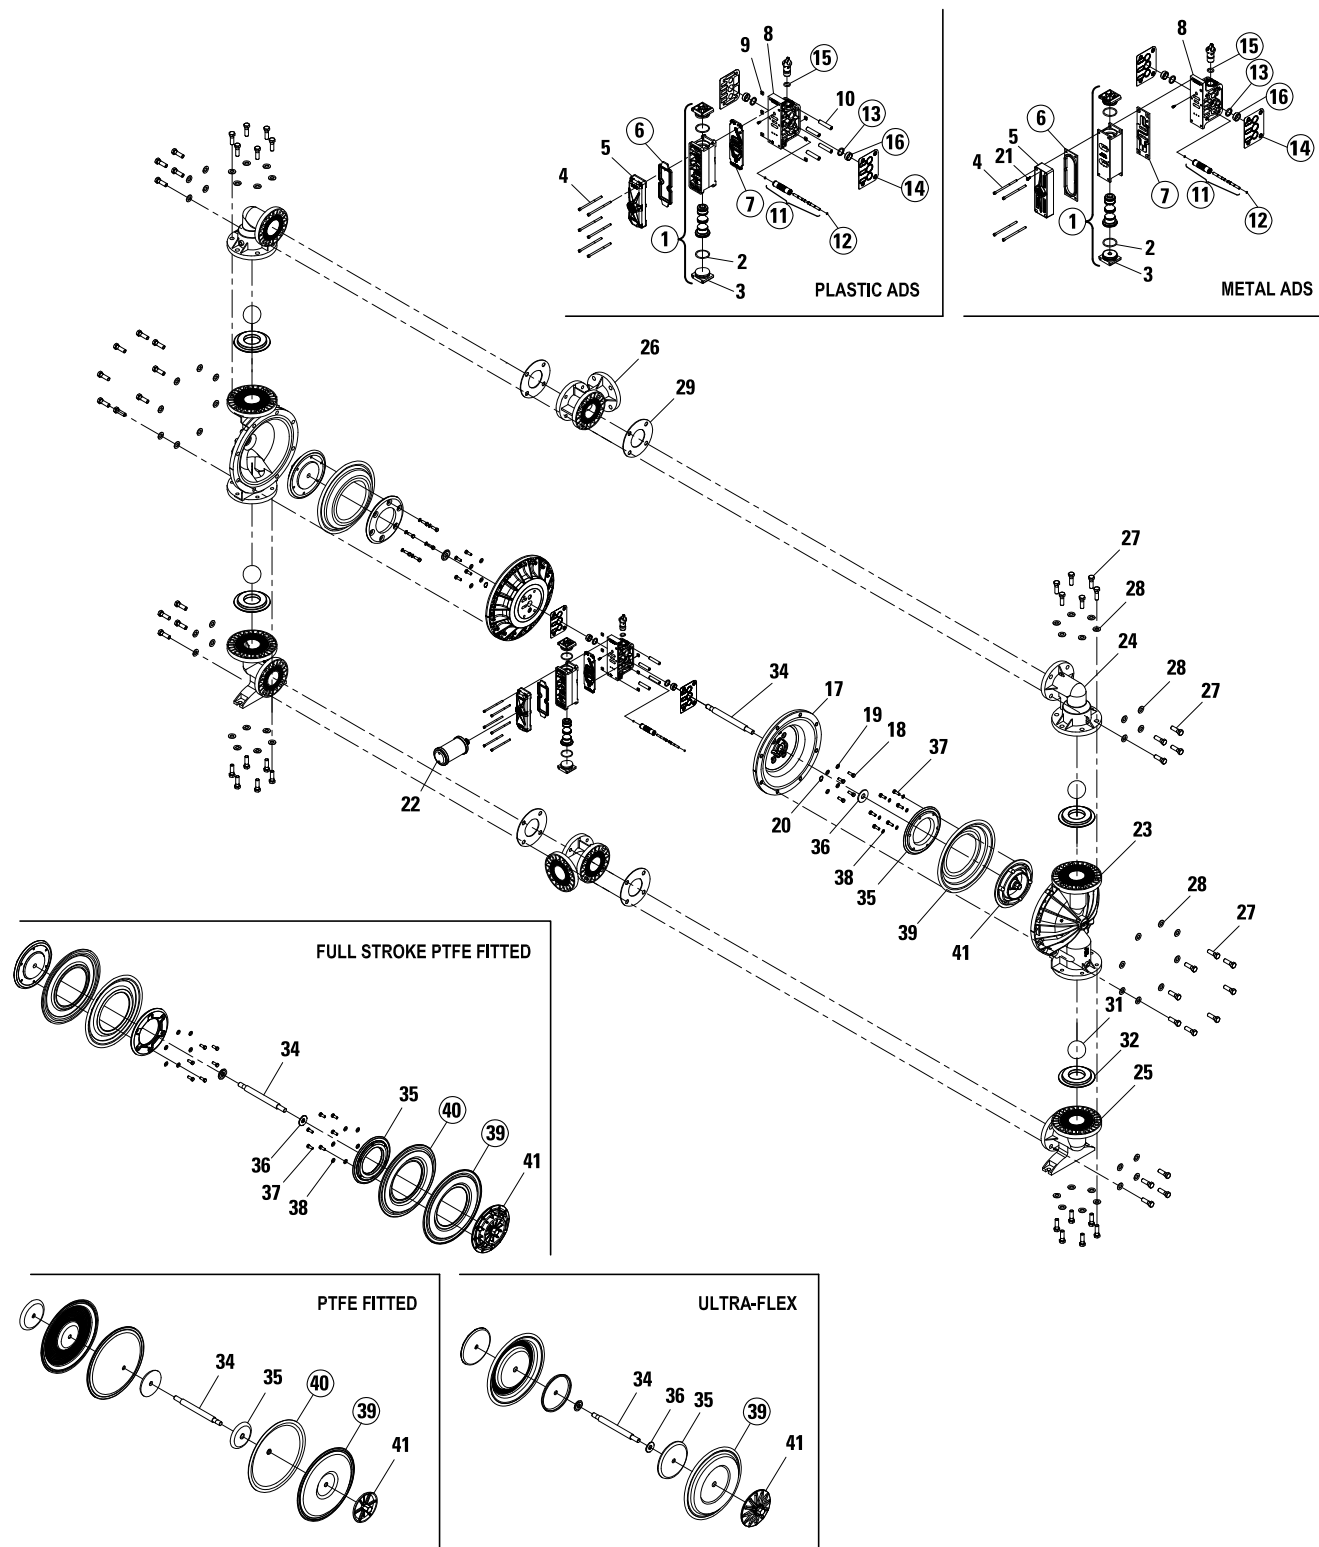

PX1500 ALUMINUM

PARTS LISTING

ITEM	DESCRIPTION	QTY.	PX1500/AAAAA P/N	PX1500/AAAPP P/N	PX1500/ASAAA P/N	PX1500/ASAPP P/N
AIR DISTRIBUTION COMPONENTS						
1	Pro-Flo V™ Assembly, Air Valve ¹	1	04-2030-01	08-2030-20	04-2030-01	08-2030-20
2	O-Ring (-225), End Cap (Ø1.859" x Ø.139")	2	04-2390-52-700	04-2390-52-700	04-2390-52-700	04-2390-52-700
3	End Cap	2	04-2340-01	04-2330-20-700	04-2340-01	04-2330-20-700
4	Screw, SHC, Air Valve (1/4"-20 x 4 1/2")	4	01-6000-03	N/A	01-6000-03	N/A
	Screw, SHC, Air Valve (1/4"-20 x 4 1/2")	6	N/A	01-6000-03	N/A	01-6000-03
5	Muffler Plate, Pro-Flo V™	1	04-3185-01	08-3185-20	04-3185-01	08-3185-20
6	Gasket, Muffler Plate, Pro-Flo V™	1	04-3502-52	08-3502-52	04-3502-52	08-3502-52
7	Gasket, Air Valve, Pro-Flo V™	1	04-2620-52	08-2620-52	04-2620-52	08-2620-52
8	Center Block Assembly, Pro-Flo X™ ²	1	15-3126-01	15-3126-20	15-3126-01	15-3126-20
9	Nut, Square 1/4"-20	6	N/A	00-6505-03	N/A	00-6505-03
10	Sleeve, Threaded, C-Blk, Pro-Flo	4	N/A	04-7710-08	N/A	04-7710-08
11	Pilot Sleeve Assembly	1	15-3884-99	15-3884-99	15-3884-99	15-3884-99
12	Pilot Spool Retaining O-Ring	2	04-2650-49-700	04-2650-49-700	04-2650-49-700	04-2650-49-700
13	Shaft Seal	2	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225
14	Gasket, Center Block Pro-Flo V™	2	04-3529-52	04-3529-52	04-3529-52	04-3529-52
15	O-Ring (-210), Adjuster (Ø.734" x Ø.139")	1	02-3200-52	02-3200-52	02-3200-52	02-3200-52
16	Bushing, Shaft	2	15-3306-13	15-3306-13	15-3306-13	15-3306-13
17	Air Chamber, Pro-Flo V™	2	15-3691-01	15-3691-01	15-3691-01	15-3691-01
18	Screw, HHC (3/8"-16 x 1-1/8")	8	15-6130-08	15-6130-08	15-6130-08	15-6130-08
19	Washer, Flat (Ø.406" x Ø.812" x .065")	8	15-6740-08-50	15-6740-08-50	15-6740-08-50	15-6740-08-50
20	Retaining Ring	2	04-3890-03	04-3890-03	04-3890-03	04-3890-03
21	Grounding Screw, 10-32 x .50" Self Tapping	1	04-6345-08	N/A	04-6345-08	N/A
22	Muffler	1	15-3510-99R	15-3510-99R	15-3510-99R	15-3510-99R
WETTED PATH COMPONENTS						
23	Liquid Chamber, Bolted	2	15-4980-01	15-4980-01	15-4980-01	15-4980-01
24	Discharge Elbow, Bolted	2	15-5250-01	15-5250-01	15-5250-01	15-5250-01
25	Inlet Elbow, Bolted	2	15-5210-01	15-5210-01	15-5210-01	15-5210-01
26	T-Section, Bolted (ANSI)	2	15-5180-01	15-5180-01	15-5180-01	15-5180-01
	T-Section, Bolted (DIN)	2	15-5185-01	15-5185-01	15-5185-01	15-5185-01
27	Screw, HHC (5/8"-11 x 2")	56	15-6180-08	15-6180-08	15-6180-08	15-6180-08
28	Washer, Flat (Ø.656" x Ø1.312" x .095")	56	15-6732-08	15-6732-08	15-6732-08	15-6732-08
GASKETS/VALVE BALLS/VALVE SEATS/VALVE O-RINGS						
29	T-Section Gasket	4	*	*	*	*
30	Gasket, Manifold, Full/Reduced-Stroke PTFE Fitted (Not shown)	4	15-1405-55	15-1405-55	15-1405-55	15-1405-55
31	Ball, Valve	4	*	*	*	*
32	Seat, Valve	4	*	*	*	*
33	Valve Seat O-Ring, Full/Reduced-Stroke PTFE Fitted (Not shown)	4	15-1205-55	15-1205-55	15-1205-55	15-1205-55
FULL STROKE RUBBER/TPE/PTFE COMPONENTS						
34	Shaft	1	15-3805-09	15-3805-09	N/A	N/A
35	Piston, Inner, Full Stroke Rubber/TPE/PTFE Fitted	2	15-3700-01	15-3700-01	N/A	N/A
36	Washer, Inner Piston Back-Up	2	15-6850-08	15-6850-08	N/A	N/A
37	Inner Piston Screw (3/8" - 16 x 1-1/8"), Full Stroke Rubber/TPE/PTFE Fitted	12	15-6130-08	15-6130-08	N/A	N/A
38	Inner Piston Washer (Ø.406" x Ø.812" x .065"), Rubber/TPE/PTFE Fitted	12	15-6740-08-50	15-6740-08-50	N/A	N/A
39	Diaphragm, Primary	2	*	*	N/A	N/A
	Diaphragm, Primary, Full Stroke PTFE Fitted	2	15-1040-55-42	15-1040-55-42	15-1040-55-42	N/A
40	Diaphragm, Full Stroke Back-Up	2	15-1065-57	15-1065-57	15-1065-57	N/A
41	Piston, Outer, Full Stroke Rubber/TPE/PTFE Fitted	2	15-4550-01	15-4550-01	15-4550-03	N/A

*See elastomer chart - Section 9

¹Air Valve Assembly includes items 2 and 3.

²Metal Center Block Assembly includes item 13, 15 and 16. Plastic Center Block Assembly includes item 9, 10, 13, 15 and 16.

All boldface items are primary wear parts.

EXPLODED VIEW & PARTS LISTING, CONT.

PX1500 ALUMINUM

PARTS LISTING

ITEM	DESCRIPTION	QTY.	PX1500/AAAAA P/N	PX1500/AAAPP P/N	PX1500/ASAAA P/N	PX1500/ASAPP P/N
REDUCED STROKE ULTRA-FLEX™ COMPONENTS						
34	Shaft	1	15-3805-09	15-3805-09	N/A	N/A
35	Piston Inner, Reduced Stroke Ultra-Flex™ Fitted	2	15-3760-08	15-3760-08	N/A	N/A
36	Washer, Inner Piston Back-Up	2	15-6850-08	15-6850-08	N/A	N/A
39	Diaphragm, Primary, Ultra-Flex™	2	*	*	N/A	N/A
41	Piston Outer, Reduced Stroke Ultra-Flex™ Fitted	2	15-4560-01	15-4560-01	N/A	N/A
REDUCED STROKE PTFE COMPONENTS						
34	Shaft	1	N/A	N/A	15-3805-09	15-3805-09
35	Piston, Inner, Reduced Stroke PTFE Fitted	2	N/A	N/A	15-3750-01	15-3750-01
39	Diaphragm, Primary, Reduced Stroke PTFE Fitted	2	N/A	N/A	15-1010-55-42	15-1010-55-42
40	Diaphragm, Back-Up, Reduced Stroke	2	N/A	N/A	*	*
41	Piston, Outer, Reduced Stroke PTFE Fitted	2	N/A	N/A	15-4600-03	15-4600-03

*See elastomer chart - Section 9

¹Air Valve Assembly includes items 2 and 3.

²Metal Center Block Assembly includes item 13, 15 and 16. Plastic Center Block Assembly includes item 9, 10, 13, 15 and 16.


All boldface items are primary wear parts.

NOTES

EXPLODED VIEW & PARTS LISTING

PX1500 STAINLESS STEEL

EXPLODED VIEW

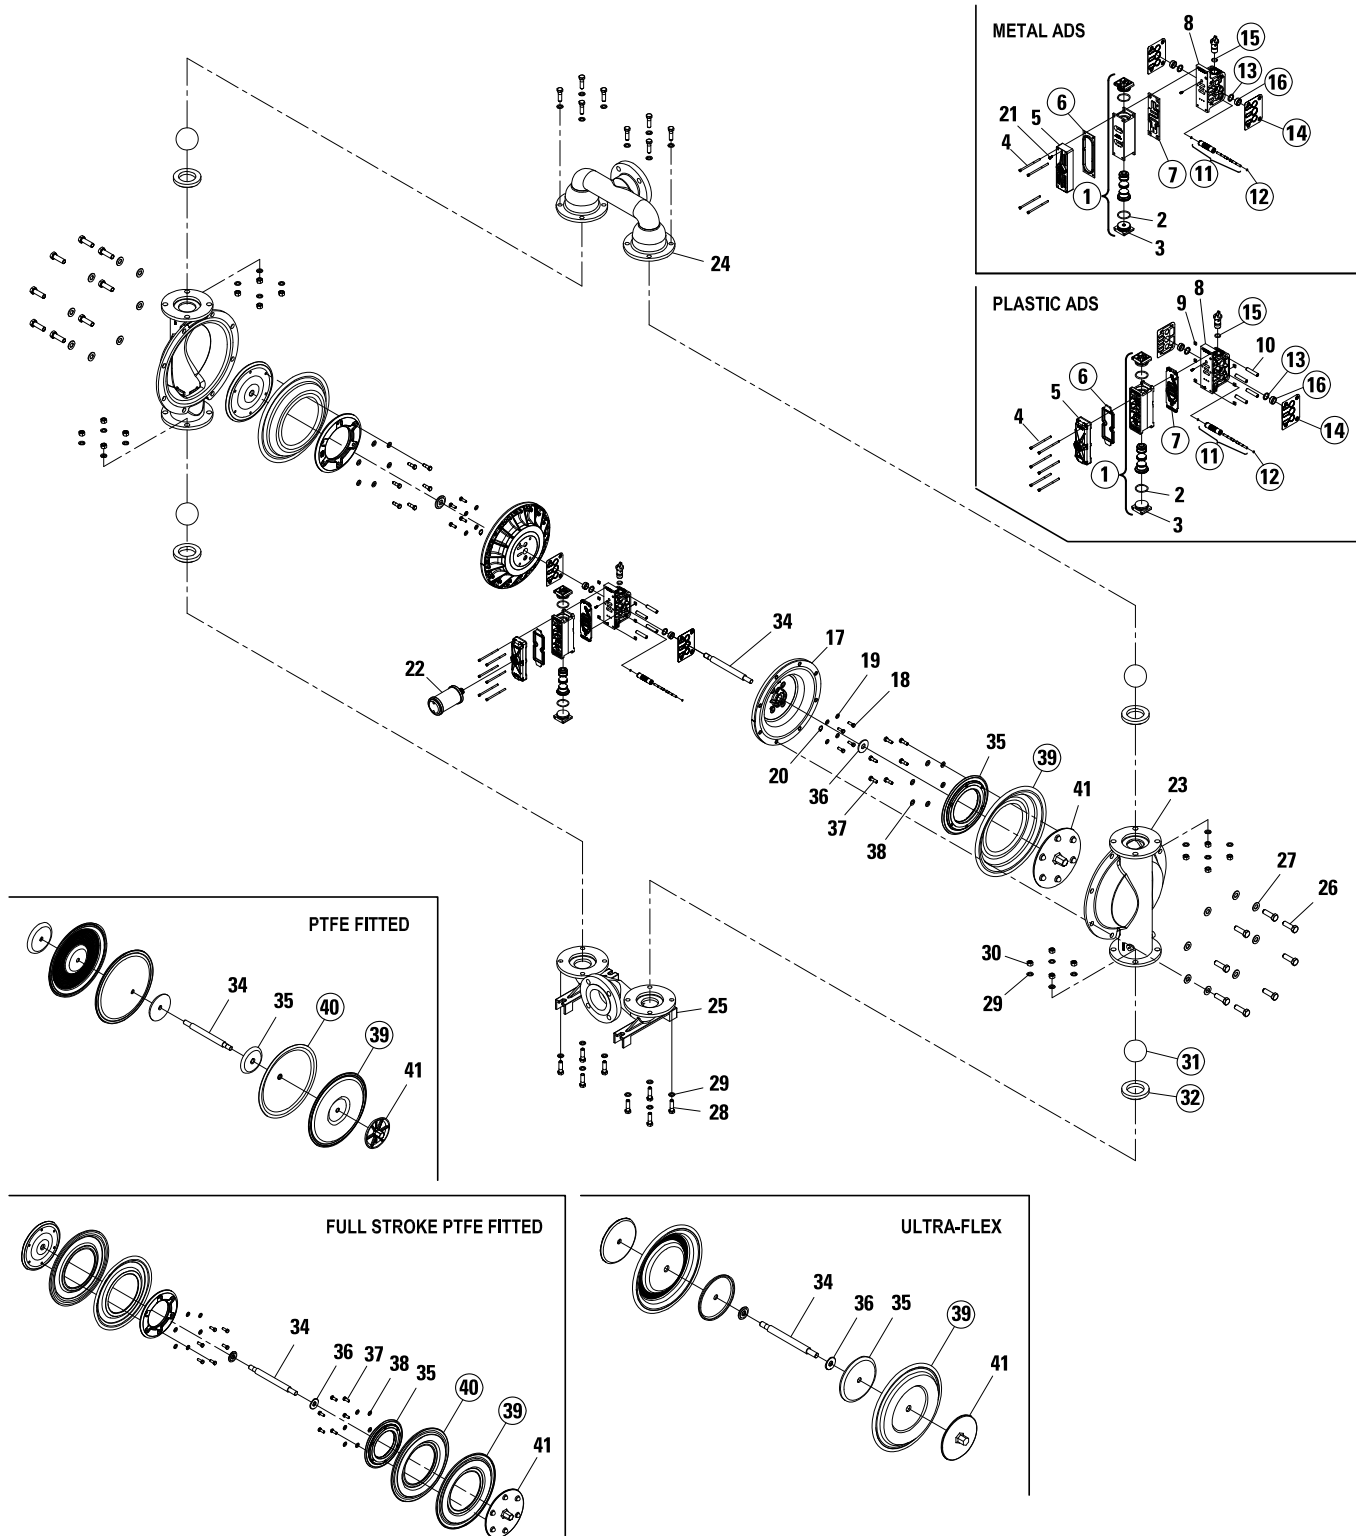

EXPLODED VIEW & PARTS LISTING

PX1500 STAINLESS STEEL

PARTS LISTING

ITEM	DESCRIPTION	QTY.	PX1500/SSAAA P/N	PX1500/HHAAA P/N	PX1500/SSSSS P/N	PX1500/SSAPP P/N
AIR DISTRIBUTION COMPONENTS						
1	Pro-Flo V™ Assembly, Air Valve ¹	1	04-2030-01	04-2030-01	04-2030-03	08-2030-20
2	O-Ring (-225), End Cap (Ø1.859" x Ø.139")	2	04-2390-52-700	04-2390-52-700	04-2390-52-700	04-2390-52-700
3	End Cap	2	04-2340-01	04-2340-01	04-2340-03	04-2330-20-700
4	Screw, SHC, Air Valve (1/4"-20 x 4 1/2")	4	01-6000-03	01-6000-03	01-6000-03	N/A
	Screw, SHC, Air Valve (1/4"-20 x 4 1/2")	6	N/A	N/A	N/A	01-6000-03
5	Muffler Plate, Pro-Flo V™	1	04-3185-01	04-3185-01	04-3185-03	08-3185-20
6	Gasket, Muffler Plate, Pro-Flo V™	1	04-3502-52	04-3502-52	04-3502-52	08-3502-52
7	Gasket, Air Valve, Pro-Flo V™	1	04-2620-52	04-2620-52	04-2620-52	08-2620-52
8	Center Block Assembly, Pro-Flo X™ ²	1	15-3126-01	15-3126-01	15-3126-03	15-3126-20
9	Nut, Square, 1/4"-20	6	N/A	N/A	N/A	00-6505-03
10	Sleeve, Threaded, C-Blk, Pro-Flo	4	N/A	N/A	N/A	04-7710-08
11	Pilot Sleeve Assembly	1	15-3884-99	15-3884-99	15-3884-99	15-3884-99
12	Pilot Spool Retaining O-Ring	2	04-2650-49-700	04-2650-49-700	04-2650-49-700	04-2650-49-700
13	Shaft Seal	2	15-3210-55-225	15-3210-55-225	15-3210-55-225	15-3210-55-225
14	Gasket, Center Block Pro-Flo V™	2	04-3529-52	04-3529-52	04-3529-52	04-3529-52
15	O-Ring (-210), Adjuster (Ø.734" x Ø.139")	1	02-3200-52	02-3200-52	02-3200-52	02-3200-52
16	Bushing, Shaft	2	15-3306-13	15-3306-13	15-3306-13	15-3306-13
17	Air Chamber, Pro-Flo V™	2	15-3691-01	15-3691-01	15-3690-03	15-3690-03
18	Screw, HHC (3/8"-16 x 1-1/8")	8	15-6130-08	15-6130-08	N/A	N/A
	Screw, HHC (3/8"-16 x 1")	8	N/A	N/A	08-6130-03	08-6130-03
19	Washer, Flat (Ø.406" x Ø.812" x .065")	8	15-6740-08-50	15-6740-08-50	04-6740-03	04-6740-03
20	Retaining Ring	2	04-3890-03	04-3890-03	04-3890-03	04-3890-03
21	Grounding Screw, 10-32 x .50" Self Tapping	1	04-6345-08	04-6345-08	04-6345-08	N/A
22	Muffler	1	15-3510-99R	15-3510-99R	15-3513-99	15-3510-99R
WETTED PATH COMPONENTS						
23	Liquid Chamber, Bolted	2	15-5005-03	15-5005-04	15-5005-03	15-5005-03
24	Manifold, Discharge (ANSI)	1	15-5030-03	15-5030-04	15-5030-03	15-5030-03
	Manifold, Discharge (DIN)	1	15-5031-03	15-5031-04	15-5031-03	15-5031-03
25	Manifold, Inlet (ANSI)	1	15-5090-03	15-5090-04	15-5090-03	15-5090-03
	Manifold, Inlet (DIN)	1	15-5091-03	15-5091-04	15-5091-03	15-5091-03
26	Screw, HHC (5/8"-11 x 2")	16	15-6180-03	15-6180-03	15-6180-03	15-6180-03
27	Washer, Flat (Ø.656" x Ø1.312" x .095")	16	15-6732-03	15-6732-03	15-6732-03	15-6732-03
28	Screw, HHC (1/2"-13 x 1-3/4")	16	15-6182-03	15-6182-03	15-6182-03	15-6182-03
29	Washer, Flat (Ø.516" x Ø.875" x .063")	32	08-6840-03-60	08-6840-03-60	08-6840-03-60	08-6840-03-60
30	Hex Nut (1/2"-13)	16	15-6420-03	15-6420-03	15-6420-03	15-6420-03
GASKETS/VALVE BALLS/VALVE SEATS/VALVE O-RINGS						
31	Ball, Valve	4	*	*	*	*
32	Seat, Valve	4	*	*	*	*
33	Valve Seat O-Ring, Full/Reduced-Fitted PTFE Fitted (Not Shown)	4	15-1200-55	15-1200-55	15-1200-55	15-1200-55

*See elastomer chart - Section 9

¹Air Valve Assembly includes items 2 and 3.

²Metal Center Block Assembly includes item 13, 15 and 16. Plastic Center Block Assembly includes item 9, 10, 13, 15 and 16.

All boldface items are primary wear parts.

EXPLODED VIEW & PARTS LISTING, CONT.

PX1500 STAINLESS STEEL

PARTS LISTING

ITEM	DESCRIPTION	QTY.	PX1500/SSAAA P/N	PX1500/HHAAA P/N	PX1500/SSSSS P/N	PX1500/SSAPP P/N
FULL STROKE RUBBER/TPE/PTFE COMPONENTS						
34	Shaft	1	15-3805-09	15-3805-09	15-3805-09	15-3805-09
35	Piston, Inner, Full Stroke Rubber/TPE/PTFE Fitted	2	15-3700-01	15-3700-01	15-3700-03	15-3700-01
36	Washer, Inner Piston Back-Up	2	15-6850-08	15-6850-08	15-6850-08	15-6850-08
37	Inner Piston Screw (3/8" - 16 x 1-1/8")	12	15-6130-08	15-6130-08	N/A	N/A
	Inner Piston Screw (3/8" - 16 x 1")	12	N/A	N/A	08-6130-03	
38	Inner Piston Washer (Ø.406" x Ø.812" x .065")	12	15-6740-08-50	15-6740-08-50	04-6740-03	15-6740-08-50
39	Diaphragm, Primary	2	*	*	*	*
	Diaphragm, Primary, Full Stroke PTFE Fitted	2	15-1040-55-42	15-1040-55-42	15-1040-55-42	15-1040-55-42
40	Diaphragm, Back-Up, Full Stroke	2	15-1065-57	15-1065-57	15-1065-57	15-1065-57
41	Piston, Outer, Full Stroke Rubber/TPE/PTFE Fitted	2	15-4550-03	15-4550-04	15-4550-03	15-4550-03
REDUCED STROKE ULTRA-FLEX™ COMPONENTS						
34	Shaft	1	15-3805-09	15-3805-09	15-3805-09	15-3805-09
35	Piston Inner, Reduced Stroke Ultra-Flex™ Fitted	2	15-3760-08	15-3760-08	15-3760-08	15-3760-08
36	Washer, Inner Piston Back-Up	2	15-6850-08	15-6850-08	15-6850-08	15-6850-08
39	Diaphragm, Primary, Ultra-Flex™	2	*	*	*	*
41	Piston Outer, Reduced Stroke Ultra-Flex™ Fitted	2	15-4560-03	15-4560-04	15-4560-03	15-4560-03
REDUCED STROKE PTFE COMPONENTS						
34	Shaft	1	15-3805-09	15-3805-09	15-3805-09	15-3805-09
35	Piston Inner, Reduced Stroke PTFE Fitted	2	15-3750-01	15-3752-03	15-3752-03	15-3750-01
39	Diaphragm, Primary, Reduced Stroke PTFE Fitted	2	15-1010-55-42	15-1010-55-42	15-1010-55-42	15-1010-55-42
40	Diaphragm, Back-Up, Reduced Stroke PTFE Fitted	2	*	*	*	*
41	Piston Outer, Reduce Stroke PTFE Fitted	2	15-4600-03	15-4600-04	15-4600-03	15-4600-03

*See elastomer chart - Section 9

¹Air Valve Assembly includes items 2 and 3.

²Metal Center Block Assembly includes item 13, 15 and 16. Plastic Center Block Assembly includes item 9, 10, 13, 15 and 16.





All boldface items are primary wear parts.

NOTES

EXPLODED VIEW & PARTS LISTING

PX1500 STAINLESS STEEL DROP-IN CONFIGURATION (0677/0678)

EXPLODED VIEW

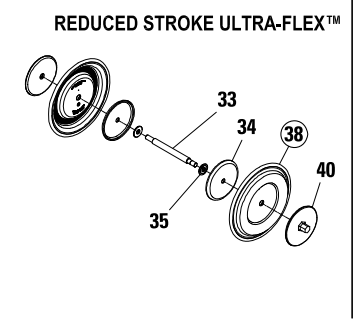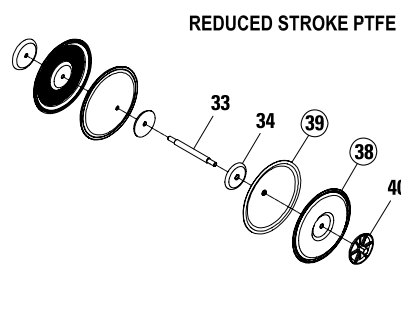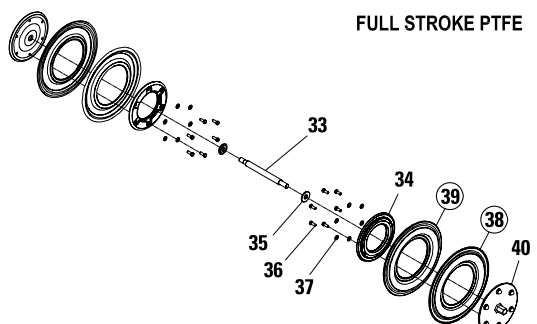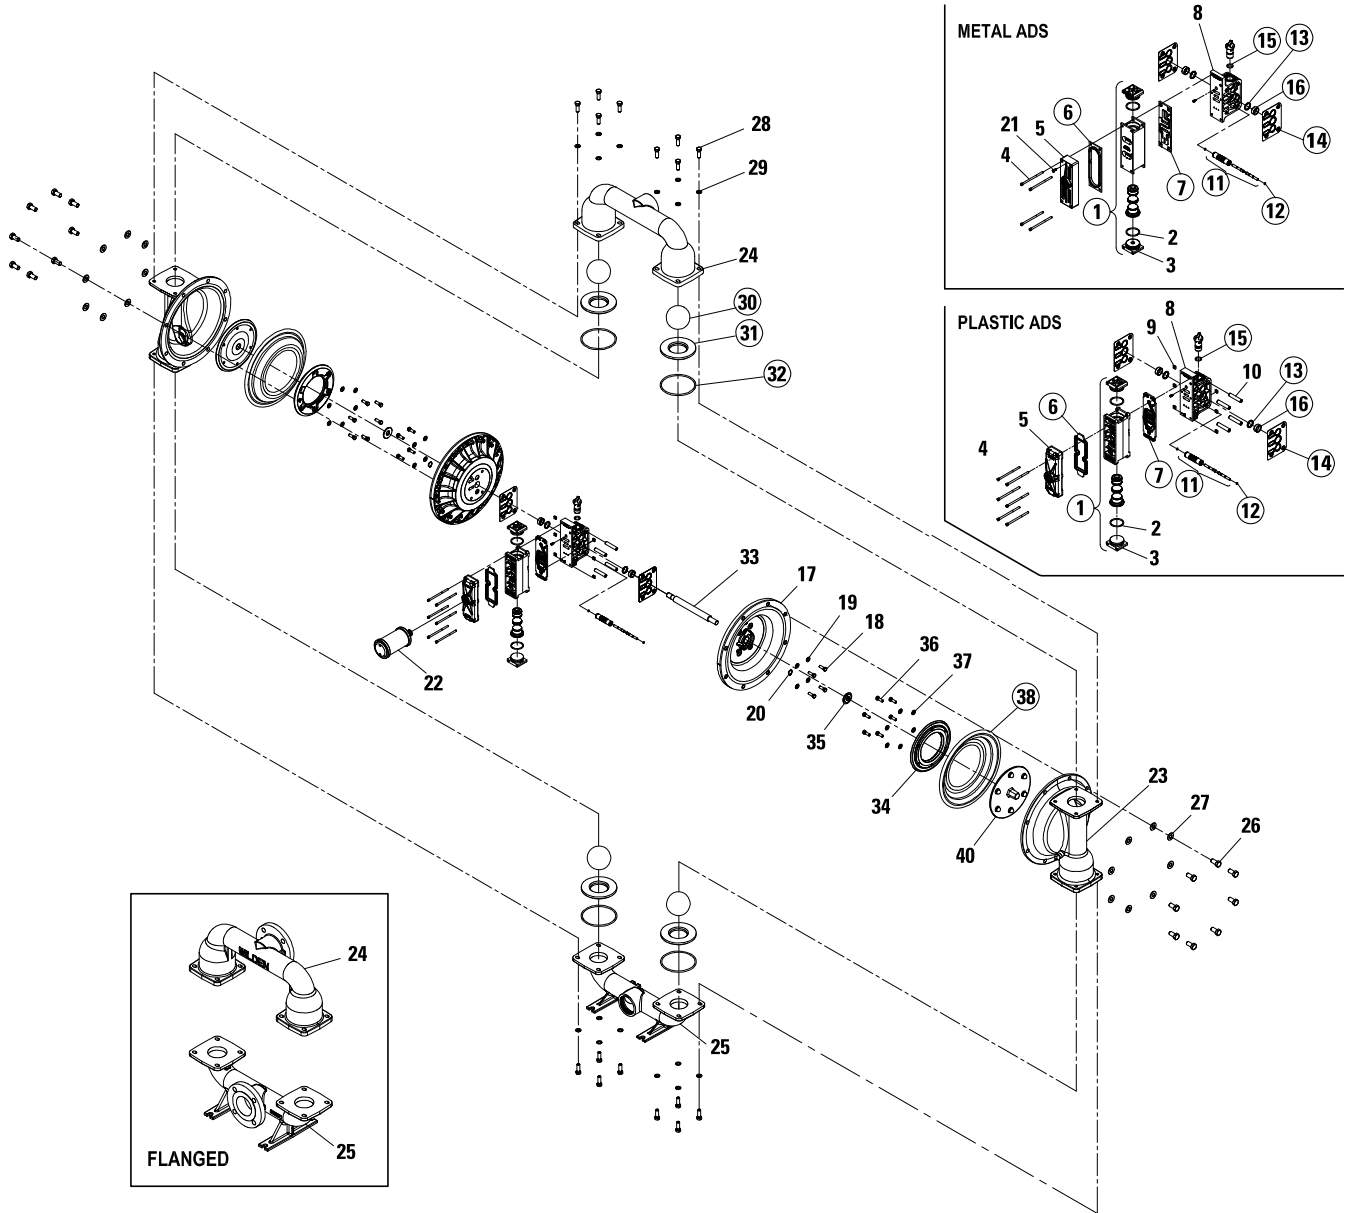

EXPLODED VIEW & PARTS LISTING

PX1500 STAINLESS STEEL DROP-IN CONFIGURATION (0677/0678)

PARTS LISTING

ITEM	DESCRIPTION	QTY.	PX1500/SSAAA P/N	PX1500/SSSSS P/N	PX1500/SSSPP P/N
AIR DISTRIBUTION COMPONENTS					
1	Pro-Flo V™ Assembly, Air Valve ¹	1	04-2030-01	04-2030-03	08-2030-20
2	O-Ring (-225), End Cap (Ø1.859" x Ø.139")	2	04-2390-52-700	04-2390-52-700	04-2390-52-700
3	End Cap	2	04-2340-01	04-2340-03	04-2330-20-700
4	Screw, SHC, Air Valve (1/4"-20 x 4 1/2")	4	01-6000-03	01-6000-03	N/A
	Screw, SHC, Air Valve (1/4"-20 x 4 1/2")	6	N/A	N/A	01-6000-03
5	Muffler Plate, Pro-Flo V™	1	04-3185-01	04-3185-03	08-3185-20
6	Gasket, Muffler Plate, Pro-Flo V™	1	04-3502-52	04-3502-52	08-3502-52
7	Gasket, Air Valve, Pro-Flo V™	1	04-2620-52	04-2620-52	08-2620-52
8	Center Block Assembly, Pro-Flo X™ ²	1	15-3126-01	15-3126-03	15-3126-20
9	Nut, Square, 1/4"-20	6	N/A	N/A	00-6505-03
10	Sleeve, Threaded, C-Blk, Pro-Flo	4	N/A	N/A	04-7710-08
11	Pilot Sleeve Assembly	1	15-3884-99	15-3884-99	15-3884-99
12	Pilot Spool Retaining O-Ring	2	04-2650-49-700	04-2650-49-700	04-2650-49-700
13	Shaft Seal	2	15-3210-55-225	15-3210-55-225	15-3210-55-225
14	Gasket, Center Block Pro-Flo V™	2	04-3529-52	04-3529-52	04-3529-52
15	O-Ring (-210), Adjuster (Ø.734" x Ø.139")	1	02-3200-52	02-3200-52	02-3200-52
16	Bushing, Shaft	2	15-3306-13	15-3306-13	15-3306-13
17	Air Chamber, Pro-Flo V	2	15-3691-01	15-3690-03	15-3690-03
18	Screw, HHC (3/8"-16 x 1-1/8")	8	15-6130-08	N/A	N/A
	Screw, HHC (3/8"-16 x 1")	8	N/A	08-6130-03	08-6130-03
19	Washer, Flat (Ø.406" x Ø.812" x .065")	8	15-6740-08-50	04-6740-03	04-6740-03
20	Retaining Ring	2	04-3890-03	04-3890-03	04-3890-03
21	Grounding Screw, 10-32 x .50" Self Tapping	1	04-6345-08	04-6345-08	N/A
22	Muffler	1	15-3510-99R	15-3513-99	15-3510-99R
WETTED PATH COMPONENTS					
23	Liquid Chamber, Bolted	2	15-5006-03	15-5006-03	15-5006-03
24	Manifold, Discharge (NPT)	1	15-5035-03	15-5035-03	15-5035-03
	Manifold, Discharge (BSPT)	1	15-5036-03	15-5036-03	15-5036-03
	Manifold, Discharge (ANSI)	1	15-5045-03	15-5045-03	15-5045-03
	Manifold, Discharge (DIN)	1	15-5046-03	15-5046-03	15-5046-03
25	Manifold, Inlet (NPT)	1	15-5095-03	15-5095-03	15-5095-03
	Manifold, Inlet (BSPT)	1	15-5096-03	15-5096-03	15-5096-03
	Manifold, Inlet (ANSI)	1	15-5125-03	15-5125-03	15-5125-03
	Manifold, Inlet (DIN)	1	15-5126-03	15-5126-03	15-5126-03
26	Screw, HHC (5/8"-11 x 2")	16	15-6180-03	15-6180-03	15-6180-03
27	Washer, Flat (Ø.656" x Ø1.312" x .095")	16	15-6732-03	15-6732-03	15-6732-03
28	Screw, HHC (1/2"-13 x 1-1/2")	16	04-6180-03	04-6180-03	04-6180-03
29	Washer, Flat (Ø.516" x Ø.875" x .063")	16	08-6840-03-60	08-6840-03-60	08-6840-03-60
GASKETS/VALVE BALLS/VALVE SEATS/VALVE O-RINGS					
30	Ball, Valve	4	*	*	*
	Ball, Valve, Full/Reduced-Stroke PTFE Fitted	4	15-1085-55	15-1085-55	15-1085-55
31	Seat, Valve	4	*	*	*
	Seat, Valve, Full/Reduced-Stroke PTFE Fitted	4	15-1129-03	15-1129-03	15-1129-03
32	Valve Seat O-Ring, Full/Reduced-Stroke PTFE Fitted	4	15-1209-55	15-1209-55	15-1209-55

*See elastomer chart - Section 9

¹Air Valve Assembly includes items 2 and 3.

²Metal Center Block Assembly includes item 13, 15 and 16. Plastic Center Block Assembly includes item 9, 10, 13, 15 and 16.

All boldface items are primary wear parts.

EXPLODED VIEW & PARTS LISTING, CONT.

PX1500 STAINLESS STEEL DROP-IN CONFIGURATION (0677/0678)

PARTS LISTING

ITEM	DESCRIPTION	QTY.	PX1500/SSAAA P/N	PX1500/SSSSS P/N	PX1500/SSSPP P/N
FULL STROKE RUBBER/TPE/PTFE COMPONENTS					
33	Shaft	1	15-3805-09	15-3805-09	15-3805-09
34	Piston, Inner	2	15-3700-01	15-3700-03	15-3700-01
35	Washer, Inner Piston Back-Up	2	15-6850-08	15-6850-08	15-6850-08
36	Screw, HHC (3/8"-16 x 1-1/8")	12	15-6130-08	N/A	15-6130-08
	Screw, HHC (3/8"-16 x 1")	12	N/A	08-6130-03	N/A
37	Washer (Ø.406" x Ø.812" x .065")	12	15-6740-08-50	04-6740-03	15-6740-08-50
38	Diaphragm, Primary	2	*	*	*
	Diaphragm, Primary, Full Stroke PTFE Fitted	2	15-1040-55-42	15-1040-55-42	15-1040-55-42
39	Diaphragm, Back-Up, Full Stroke	2	15-1065-57	15-1065-57	15-1065-57
40	Piston, Outer	2	15-4550-03	15-4550-03	15-4550-03
REDUCED STROKE ULTRA-FLEX™ COMPONENTS					
33	Shaft	1	15-3805-09	15-3805-09	15-3805-09
34	Piston, Inner, Ultra-Flex™	2	15-3760-08	15-3760-08	15-3760-08
35	Washer, Inner Piston Back-Up	2	15-6850-08	15-6850-08	15-6850-08
38	Diaphragm, Primary, Ultra-Flex™	2	*	*	*
40	Piston, Outer, Ultra-Flex™	2	15-4560-03	15-4560-03	15-4560-03
REDUCED STROKE PTFE COMPONENTS					
33	Shaft	1	15-3805-09	15-3805-09	15-3805-09
34	Piston, Inner, PTFE	2	15-3750-01	15-3752-03	15-3750-01
38	Diaphragm, Primary, Reduced Stroke PTFE Fitted	2	15-1010-55-42	15-1010-55-42	15-1010-55-42
39	Diaphragm, Back-Up, Reduced Stroke	2	*	*	*
40	Piston, Outer, PTFE	2	15-4600-03	15-4600-03	15-4600-03

*See elastomer chart - Section 9

¹Air Valve Assembly includes items 2 and 3.

²Metal Center Block Assembly includes item 13, 15 and 16. Plastic Center Block Assembly includes item 9, 10, 13, 15 and 16.

All boldface items are primary wear parts.

PX1500 Aluminum

MATERIAL	DIAPHRAGMS (2)	BACK-UP DIAPHRAGMS REDUCED STROKE (2)	BACK-UP DIAPHRAGMS FULL STROKE (2)	ULTRA-FLEX DIAPHRAGMS (2)	VALVE BALLS (4)	VALVE SEATS (4)	VALVE SEAT O-RING (4)	T-SECTION GASKET (4)
Polyurethane	15-1010-50	N/A	N/A	N/A	15-1080-50	15-1126-50	N/A	N/A
Neoprene	15-1010-51	15-1060-51	N/A	15-1020-51	15-1080-51	15-1126-51	N/A	15-1325-51
Buna-N	15-1010-52	N/A	N/A	15-1020-52	15-1080-52	15-1126-52	N/A	15-1325-52
EPDM	15-1010-54	15-1060-54	N/A	15-1020-54	15-1080-54	15-1126-54	N/A	15-1325-54
Viton [®]	15-1010-53	N/A	N/A	15-1020-53	15-1080-53	N/A	N/A	N/A
Saniflex [™]	15-1010-56	15-1060-56	15-1065-56	N/A	15-1080-56	15-1126-56	N/A	N/A
Conductive Buna-N	15-1010-86	15-1060-86	N/A	N/A	N/A	N/A	N/A	N/A
PTFE	15-1010-55-42	N/A	N/A	N/A	15-1080-55	N/A	15-1205-55 ¹	15-1325-55
Full Stroke PTFE	15-1040-55-42	N/A	N/A	N/A	15-1080-55	N/A	15-1209-55 ¹	N/A
Wil-Flex [™]	15-1010-58	N/A	15-1065-57	N/A	15-1080-58	15-1126-58	N/A	15-1325-58
Aluminum	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Stainless Steel	N/A	N/A	N/A	N/A	N/A	15-1125-03	N/A	N/A
Alloy C	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A

¹Used in conjunction with metallic valve seat.**PX1500 Stainless Steel**

MATERIAL	DIAPHRAGMS (2)	BACK-UP DIAPHRAGMS REDUCED STROKE (2)	BACK-UP DIAPHRAGMS FULL STROKE (2)	ULTRA-FLEX DIAPHRAGMS (2)	VALVE BALLS (4)	VALVE SEATS (4)	VALVE SEAT O-RING (4)
Polyurethane	15-1010-50	N/A	N/A	N/A	15-1080-50	15-1120-50	N/A
Neoprene	15-1010-51	15-1060-51	N/A	15-1020-51	15-1080-51	15-1120-51	N/A
Buna-N	15-1010-52	N/A	N/A	15-1020-52	15-1080-52	15-1120-52	N/A
EPDM	15-1010-54	15-1060-54	N/A	15-1020-54	15-1080-54	15-1120-54	N/A
Viton [®]	15-1010-53	N/A	N/A	15-1020-53	15-1080-53	15-1120-53	N/A
Saniflex [™]	15-1010-56	15-1060-56	15-1065-56	N/A	15-1080-56	15-1120-56	N/A
Conductive Buna-N	15-1010-86	15-1060-86	N/A	N/A	N/A	N/A	N/A
PTFE	15-1010-55-42	N/A	N/A	N/A	15-1080-55	N/A	15-1200-55 ¹
Full Stroke PTFE	15-1040-55-42	N/A	N/A	N/A	15-1080-55	N/A	15-1209-55 ¹
Wil-Flex [™]	15-1010-58	N/A	15-1065-57	N/A	15-1080-58	15-1120-58	N/A
Aluminum	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Stainless Steel	N/A	N/A	N/A	N/A	N/A	15-1121-03	N/A
Alloy C	N/A	N/A	N/A	N/A	N/A	15-1121-04	N/A

¹Used in conjunction with metallic valve seat.

PX1500 Stainless Steel Drop-In Configuration (0677/0678/0540/0544)

MATERIAL	DIAPHRAGMS (2)	BACK-UP DIAPHRAGMS REDUCED STROKES (2)	BACK-UP DIAPHRAGMS FULL STROKES (2)	ULTRA-FLEX™ DIAPHRAGM (2)	VALVE BALLS (4)	VALVE SEATS (4)	VALVE SEAT O-RING (4)
Neoprene	15-1010-51	15-1060-51	N/A	15-1020-51	15-1085-51	15-1128-51	N/A
Buna-N	15-1010-52	N/A	N/A	15-1020-52	15-1085-52	15-1128-52	N/A
EPDM	15-1010-54	15-1060-54	N/A	15-1020-54	15-1085-54	15-1128-54	N/A
Viton®	15-1010-53	N/A	N/A	15-1020-53	15-1085-53	15-1128-53	N/A
Saniflex™	15-1010-56	15-1060-56	15-1065-56	N/A	15-1085-56	15-1128-56	N/A
Conductive Buna-N	15-1010-86	15-1060-86	N/A	N/A	N/A	N/A	N/A
PTFE	15-1010-55-42	N/A	N/A	N/A	15-1085-55	N/A	15-1209-55 ¹
Full Stroke PTFE	15-1040-55-42	N/A	N/A	N/A	15-1085-55	N/A	15-1209-55 ¹
Wil-Flex™	15-1010-58	N/A	N/A	N/A	15-1085-58	15-1128-58	N/A
FDA Wil-Flex™	N/A	N/A	15-1065-57	N/A	N/A	N/A	N/A
Stainless Steel	N/A	N/A	N/A	N/A	N/A	15-1129-03	N/A

¹Used in conjunction with metallic valve seat.

Elastomer Kits Option

DESCRIPTION	NEOPRENE	Buna-N	VITON®	EPDM	PTFE	WIL-FLEX™	SANIFLEX™	POLYURETHANE
Pro-Flo X™ Advanced™ Aluminum - PX1500 ^{1,2}	15-9583-51	15-9583-52	15-9583-53	15-9583-54	15-9583-55	15-9583-58	15-9583-56	15-9583-57
Pro-Flo X™ Advanced™ Aluminum - PX1500 (Ultra-Flex™) ²	15-9587-51	15-9587-52	15-9587-53	15-9587-54	N/A	N/A	N/A	N/A

¹76 mm (3") Advanced™ aluminum pumps require special PTFE diaphragms (P/N 15-1010-55-42).

²76 mm (3") Advanced™ aluminum pumps use unique ball, seats and gaskets not found on Advanced™ stainless steel and alloy C pumps.

WARRANTY

Each and every product manufactured by Wilden Pump and Engineering, LLC is built to meet the highest standards of quality. Every pump is functionally tested to insure integrity of operation.

Wilden Pump and Engineering, LLC warrants that pumps, accessories and parts manufactured or supplied by it to be free from defects in material and workmanship for a period of five (5) years from date of installation or six (6) years from date of manufacture, whichever comes first. Failure due to normal wear, misapplication, or abuse is, of course, excluded from this warranty.

Since the use of Wilden pumps and parts is beyond our control, we cannot guarantee the suitability of any pump or part for a particular application and Wilden Pump and Engineering, LLC shall not be liable for any consequential damage or expense arising from the use or misuse of its products on any application. Responsibility is limited solely to replacement or repair of defective Wilden pumps and parts.

All decisions as to the cause of failure are the sole determination of Wilden Pump and Engineering, LLC.

Prior approval must be obtained from Wilden for return of any items for warranty consideration and must be accompanied by the appropriate MSDS for the product(s) involved. A Return Goods Tag, obtained from an authorized Wilden distributor, must be included with the items which must be shipped freight prepaid.

The foregoing warranty is exclusive and in lieu of all other warranties expressed or implied (whether written or oral) including all implied warranties of merchantability and fitness for any particular purpose. No distributor or other person is authorized to assume any liability or obligation for Wilden Pump and Engineering, LLC other than expressly provided herein.

PLEASE PRINT OR TYPE AND FAX TO WILDEN

PUMP INFORMATION				
Item # _____		Serial # _____		
Company Where Purchased _____				
YOUR INFORMATION				
Company Name _____				
Industry _____				
Name _____		Title _____		
Street Address _____				
City _____		State _____	Postal Code _____	Country _____
Telephone _____	Fax _____	E-mail _____	Web Address _____	
Number of pumps in facility? _____		Number of Wilden pumps? _____		
Types of pumps in facility (check all that apply): <input type="checkbox"/> Diaphragm <input type="checkbox"/> Centrifugal <input type="checkbox"/> Gear <input type="checkbox"/> Submersible <input type="checkbox"/> Lobe				
<input type="checkbox"/> Other _____				
Media being pumped? _____				
How did you hear of Wilden Pump? <input type="checkbox"/> Trade Journal <input type="checkbox"/> Trade Show <input type="checkbox"/> Internet/E-mail <input type="checkbox"/> Distributor				
<input type="checkbox"/> Other _____				

ONCE COMPLETE, FAX TO (909) 783-3440

NOTE: WARRANTY VOID IF PAGE IS NOT FAXED TO WILDEN
WILDEN PUMP & ENGINEERING, LLC

ABAUQUE
PERISTALTIC PUMPS
mouvex.com

ALMATEC®
AIR-OPERATED
DIAPHRAGM PUMPS
almatec.de

BLACKMER®
VANE PUMPS & COMPRESSORS
blackmer.com

ENVIROGEAR®
INTERNAL GEAR PUMPS
envirogearpump.com

FLUID DYNAMICS™
POLYMER BLENDING SYSTEMS
neptune1.com

GRISWOLD™
CENTRIFUGAL PUMPS
griswoldpump.com

MAAG® GROUP
GEAR PUMPS, PELLETIZING,
& FILTRATION SYSTEMS
maag.com

MOUVEX®
ECCENTRIC DISC PUMPS,
VANE PUMPS &
COMPRESSORS
mouvex.com

NEPTUNE™
DIAPHRAGM (METERING) PUMPS,
POLYMER SYSTEMS & MIXERS
neptune1.com

QUATTROFLOW™
PISTON / SYSTEM DIAPHRAGMS
quattroflow.com

REDSCREW™
SCREW PUMPS
redscrowpump.com

SYSTEM ONE®
CENTRIFUGAL PUMPS
blackmer.com

WILDEN®
AIR-OPERATED
DIAPHRAGM PUMPS
wildenpump.com



PSG reserves the right to modify the information and illustrations contained in this document without prior notice. This is a non-contractual document. 06-2012

22069 Van Buren Street,
Grand Terrace, CA 92313-5607
Telephone: (909) 422-1730
Fax: (909) 783-3440

www.wildenpump.com

Authorized Representative: